


IMPORTANT:


Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.

NO-DRILL SYSTEM

TOOLS REQUIRED-

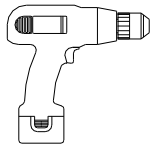


Electric or Rechargeable Drill




1/4" Socket Driver



T15 Torx Screwdriver or bit

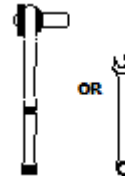


5/16" Open Wrench or Socket Wrench

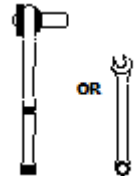


10mm Open Wrench or Socket Wrench

FLAPS AND BRACES


(1) Brace Front, DS Part #766846




(1) Brace Front, PS Part #766847



(1) Flap Assembly, Front, DS

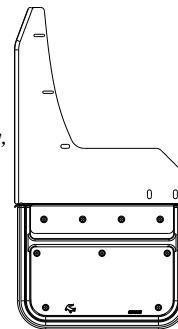

(1) Flap Assembly, Front, PS

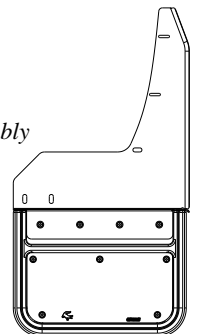


PARTS BAG #766850

a) (4) Screw, Tek, Plt #8 x 3/4" Hex Head Part #010049



b) (4) Screw, Mach. M6-1 x 25mm, SS Part #012036



c) (2) Screw, Sht Mtl M4.2-1 x 28mm, SS Part #016041



d) (8) Nut, Serrated Flange Plated, M6-1 Part # 025025



e) (4) Washer, Flat 0.281" x 1", Alum. Part #018052



f) (6) Washer, Nylon 0.318" x 1" Black Part # 054071



g) (2) Washer, Flat 0.203" x 0.781", SS Part #018018



h) (4) Washer, Flat 0.187" x 0.375", Nylon Part #054041



INSTALLATION (For ease of installation it is suggested that the wheel be removed)

1. Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Cut the protective plastic and peel away from the stainless steel. Start on the driver's side.
2. Loosely install the bracket through holes #6 & #7 to the inside of the flap through holes #4 & #5 using two machine screws (012036) and two aluminum washers (018052) and secure it with two black nylon washers (054071) and two serrated flange nuts (025025).
3. Remove the factory screw on the inner wheel well #10.

- Loosely install mud flap by placing the bracket holes #8 & #9 over the factory screws #11 & #12 on the inward side of the wheel well. *Note* The bracket will sit in front of the existing factory nuts.
- Install lower mud flap hole #3 through factory hole #10 with a sheet metal screw (016041), a stainless steel washer (018018) and a black nylon washer (054071).
- Install the bracket as far back as possible, securing it with two serrated flange nuts (025025).
- Using a bubble level or square, ensure that the mud flap is level. Viewing the vehicle from the back, the outer edge of the mud flap should appear parallel to the tires.
- Carefully tighten all fasteners on bottom mud flap hole #3. Ensure the flap has remained level.
- Using the provided Tek Screw (010049) and nylon washer (054041), install upper two mud flap holes #1 and #2 into the plastic liner. Be careful not to over tighten the screws into the plastic liner.
- Tighten the inner bracket bolts.
- Repeat procedure on passenger side.

