


IMPORTANT:


Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.



TOOLS REQUIRED-

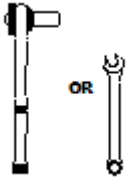


7/16" Open Wrench or
Socket Wrench



1/4" Socket Driver




T15 Torx
Bit

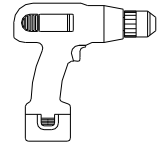


Electric or Rechargeable
Drill

FLAPS

(1) Flap Assy
Front, DS

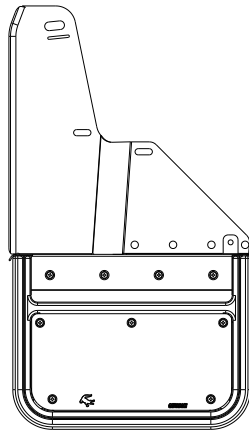


(1) Flap Assy
Front, PS

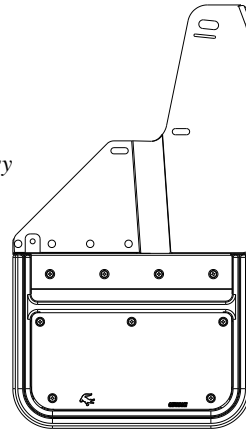

PARTS BAG # 769056

a) (2) Washer, Flat
0.281" x 1", 18g, Ox,
Part #018069




b) (4) Washer, Flat
0.203" x 1", 18g, Ox,
Part #018070




c) (2) Washer, Flat
0.437" x 1", Nylon
Part #054076



d) (4) Washer, Nylon
0.203" x 0.885"
Part #054080




e) (2) Cap Screw, Ox.
1/4"-20UNC x 5/8"
Part #014071




f) (4) Screw, Sheet Metal, Ox.
1/4" Hex Washer Head, #8-18x1"
Part # 016055



g) (1) Mud Flap Clip
Driver Side
Part # 769312

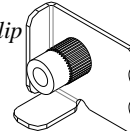

h) (1) Mud Flap Clip
Passenger Side
Part #769313

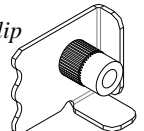

INSTALLATION *(For ease of installation it is suggested that the wheel be removed)*

1. Before you install your Mud Flap Set, see diagram and parts list for all necessary parts. Start on the driver's side.
2. Remove factory screw from wheel well holes #5 & #6.
3. Loosely install mount clip (g) on mud flap hole #1 using a cap screw (e), black oxidized washer (a), & nylon washer (c).
4. Tuck the offset tab #4 underneath the factory plastic cap until the tab is fully engaged inside the factory plastic cap
5. Loosely secure mud flap through hole #2 into factory hole #5 using supplied sheet metal screw (f), nylon washer (d) & oxidized washer (b).
6. Install mount clip (g) on hole #1 behind the fender lip.
7. Loosely secure mud flap through hole #3 into hole #6 using supplied sheet metal screw (f), oxidized washer (b) & nylon washer (d)
8. Using a bubble level or other levelling tool, ensure that the mud flap is level. Tighten fasteners.
9. Repeat procedure for passenger side.

