



**2014-18, GMC 1500, Front 12"**  
**2015-19 GMC HD, Front 12"**  
**5/8" Offset, Mud Flap Set**  
**Mounting Diagram & Instructions**

**IMPORTANT:**

**Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, or over tightening of screws and bolts causing damage to vehicle or mud flaps.**




**TOOLS REQUIRED:**



*Electric or re-chargeable  
 1/2" or 3/8" drill.*



*1/4" Drill Bit*




*5/16" Socket Driver  
 & 3/8" Open Wrench*




*#15 Torque Screwdriver*

**FLAPS:**

*(1) Flap Assembly,  
 Driver's Side*

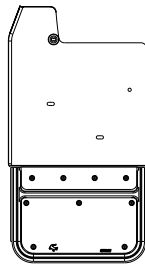

*(1) Flap Assembly  
 Passenger Side*

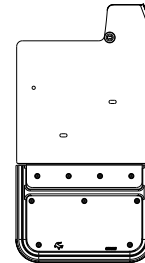

**PARTS BAG #766016**


*a) (10) Washer, Flat, SS  
 0.203" x 1.00"  
 Part #018031*




*b) (2) Washer, Lock  
 18-8SS, #10  
 Part #024001*



*c) (2) Machine Screw, SS  
 #10 x 1"  
 Part # 012022*



*d) (6) Screw, Sheet Metal  
 #8-18x1", SS, Blk Oxid.  
 Part #016041*




*e) (2) Nut, Hex  
 SS, #10  
 Part #025003*



**INSTALLATION:** *(For ease of installation it is suggested that the wheel be removed)*

1. Before you install your Mud Flap set, see the diagram and parts list for all necessary parts. Cut the protective plastic and peel away from the stainless steel. Start on the driver's side.
2. Remove three factory screws on the wheel well as shown on the diagram and replace each factory screw with a flat washer and an M4.2 x 28mm screw on holes #1 to #3, through the factory holes #5 to #7. Loosely secure at this point.
3. Square the flap with the tire while putting pressure against the wheel well and tighten the three screws on holes #1 to #3.

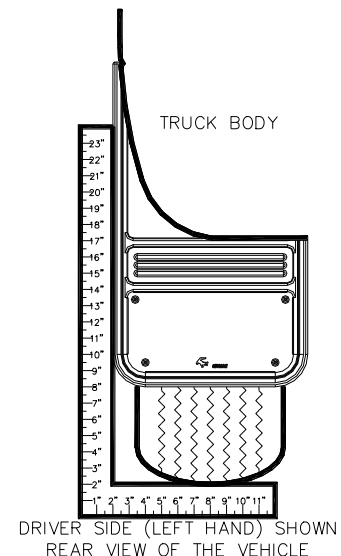

4. Drill 1/4" hole (1) from hole #4 through the factory plastic liner and secure with a Machine Screw, two flat washers, one lock washer and one hex nut.
5. Repeat procedure for the passenger side.

