

IMPORTANT:

**Manufacturer is not responsible for negligent use of vehicle with Fuel Vapor Evaporator Canister Guard Installed,
Including over-tightening of screws and bolts causing damage to vehicle or guard.**

Components

(1) Fuel Vapor Evap. Can. Guard	Part# 702460	(1) Parts Bag	Part #702461
(1) Support Strap, Clinch Nutted	Part# 702459		

Parts Bag #702461

a) (3) Hex Bolt, 18-8, SS, M6 x 25mm	Part# 012036	b) (2) Capscrew, SS, 1/4"-20 x 3/4", Hex Head	Part# 014034
c) (5) Washer, Flat, 5/16" x 11/16" 20ga, SS	Part# 018004	d) (5) Washer, Lock, SS, Helicoil, 1/4"	Part# 024000

INSTALLATION INSTRUCTIONS:

1. Before you install your Evaporator Canister Guard see the diagrams and parts list for all necessary parts.
2. Remove the factory screw #1 in front of the factory canister (see diagram #1) and install support strap bracket through the factory screw hole #1 with the fasteners a, c and d (see diagram #2). Make sure the support strap bracket is parallel to the factory canister before tightening the screw a.
3. Remove factory screws #2 and #3 at the rear end of the factory canister (diagram #2) and loosely install the evaporator canister guard through the factory screw hole #2 hole with the fasteners a, c and d (diagram #3). Make sure the two slotted holes in front of the guard are lined up with the two clinch nuts on the Support strap bracket (diagram #3) then secure the guard through the factory screw hole #3 with the fasteners a, c and d (diagram #3).
4. Secure the front end of the guard to the support bracket with the fasteners 2x b, 2x c and 2x d then tightening the screw on the factory screw hole #2.

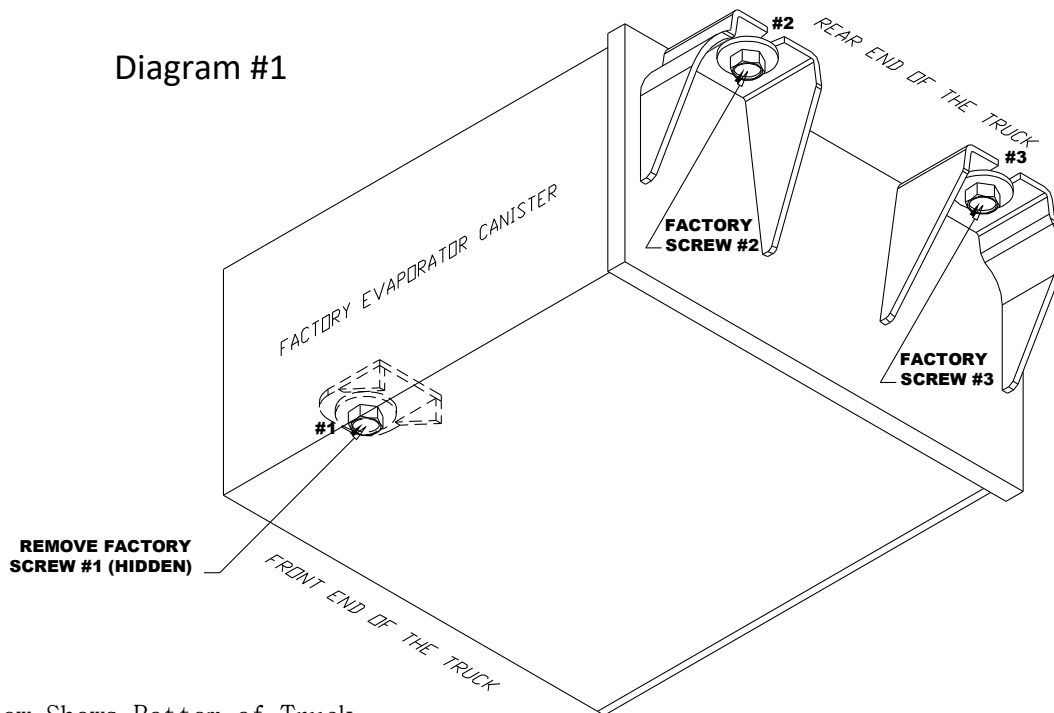


Diagram #2

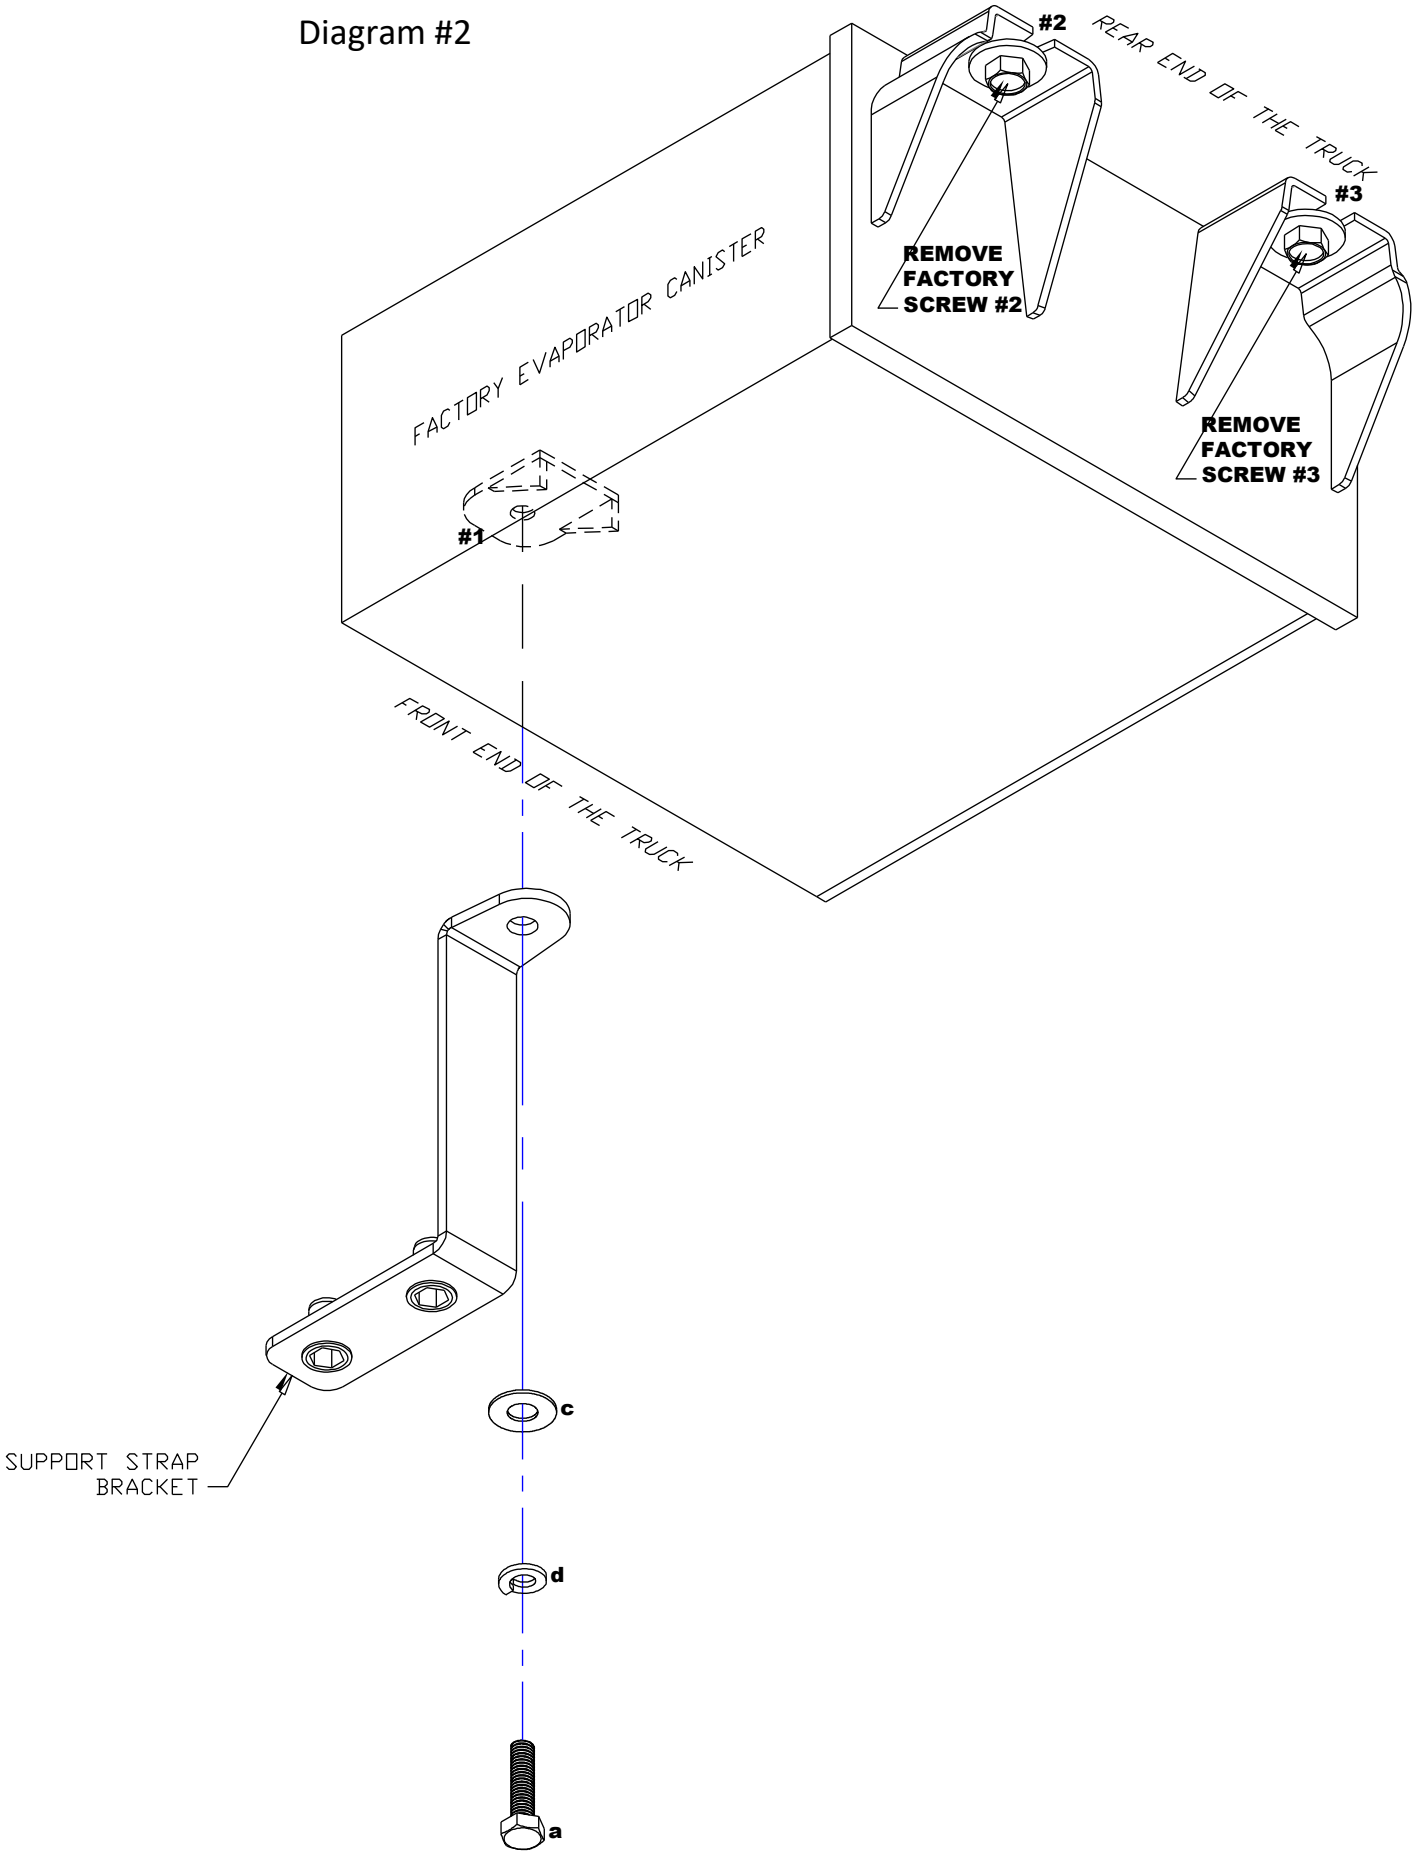


Diagram #3

