

IMPORTANT:

The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.

TOOLS REQUIRED:



*Electric or Re-Chargeable
1/2" or 3/8" Drill*



3/8" Socket Driver

PARTS ENCLOSED:


(8) Tek Screw, SS
Part #010011




(8) Flat Washer
Part #018028



(1) Mud Flaps, DS
Part #750718




(1) Mud Flap, PS
Part #750719

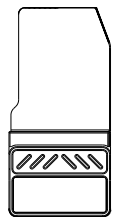

INSTALLATION

For ease of installation, it is suggested that the wheel be removed.

1. Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Start on the Driver's side.
2. Tuck the offset mud flap flange underneath the Bottom of the wheel well and centered to the tire.
3. Square the flap with the tire while putting pressure against the wheel well and mark the center line of the wheel well on the tire side of the mud flap.
4. Now fasten the flap with four washers and four tek screws along the wheel well.
5. Repeat procedure for the passenger side. Ensure all fasteners are tight.

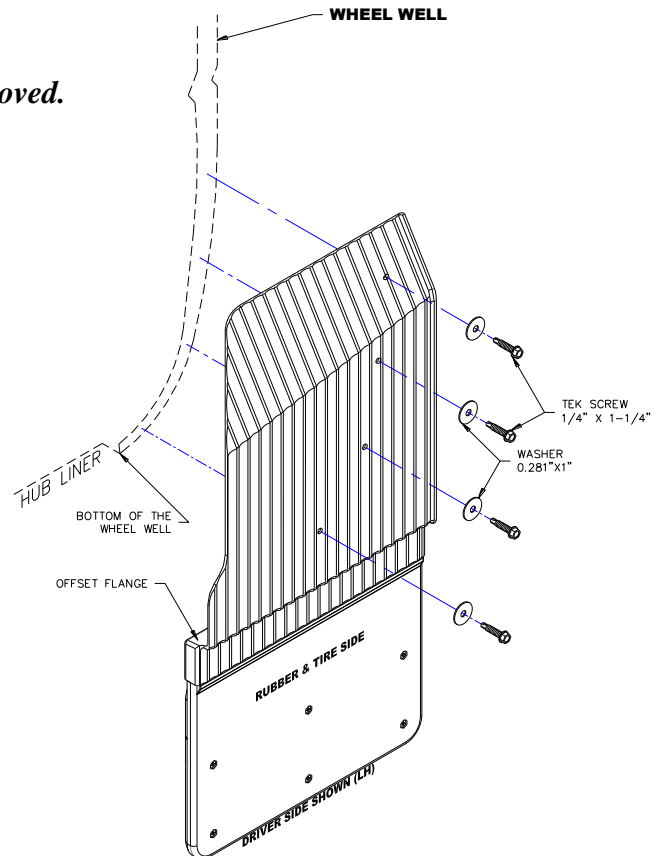

✓ Check all fasteners for tightness. Repeat procedure on the passenger side.