



# GATORBACK

## MUDFLAPS

## 2015-C Nissan Murano

### Mud Flap Set, Front

### Mounting Diagram & Instructions


Kit# GCR54F

#### IMPORTANT:


**Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.**




#### TOOLS REQUIRED-

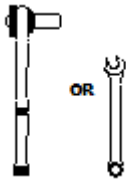

5/16" Open Wrench or  
Socket Wrench

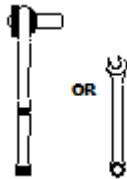


3/8" Open Wrench or  
Socket Wrench

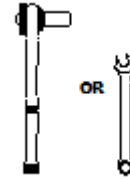


7/16" Open Wrench or  
Socket Wrench



1/4" Drill  
Bit




Phillips Head  
Bit

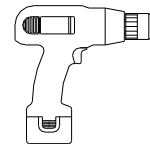


Electric or Rechargeable  
Drill

#### FLAPS

(1) Flap Assembly,  
Front, DS

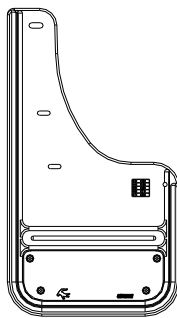

(1) Flap Assembly  
Front, PS

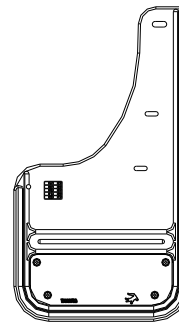


#### PARTS BAG # 768469


**a)** (4) Washer, Flat  
0.203" x 1.5", Blk Oxid.  
Part #018080




**b)** (2) Washer, Flat  
0.281" x 1", Blk Oxid.  
Part #018069



**c)** (4) Washer, Flat  
0.203" x 1" Blk Oxid.  
Part #018070



**d)** (2) Screw, Machine  
10-24 x 1-1/2", Hex Hd  
Part #012027



**e)** (4) Screw, Sheet Metal  
#10-12 x 1-1/4" Phillips Head, SS  
Part # 010027



**f)** (2) Capscrew  
1/4"-20 x 1", Blk Oxid.  
Part # 014069



**g)** (2) Washer, Lock  
18-8SS, Helicoil  
Part #024001



**h)** (2) Nut, Hex  
#10-24, SS  
Part #025003




**i)** (2) Spring Nut  
1/4"-20UNC Ext. 27/32" Reach  
Part #028011



## INSTALLATION *(For ease of installation it is suggested that the wheel be removed)*

1. Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Start on the driver's side.
2. Remove the factory screws from the inner wheel well, and the underside of the fender in order to remove the factory splash guard. Reinstall the factory screw on the underside of the fender.
3. Remove factory push pin from underside of the fender. Set aside to be reinstalled later.
4. Loosely install the mud flap through hole #2 & #3 into the existing factory holes #5 & #6 using a stainless steel screw (#010027), and a 1.5" black stainless steel washer (#018080).
5. Using a bubble level or square, ensure that the mud flap is level. Viewing the vehicle from the back, the outer edge of the mud flap should appear parallel to the tires.
6. Mark the fender through mud flap hole #1 as a guide. Install spring nut (#028011) on fender well over the mark.
7. Install mud flap hole #1 to spring nut (#028011) using a cap screw (#014069) and flat washer (#018069)
8. Hold the mud flap firmly to the liner and drill a 1/4" hole through the mud flap hole #4 to create hole #7 in the liner. Install the mud flap hole #4 to the liner hole #7 using a machine screw (#012027) and flat washer (#018070).
9. Fold back the bottom portion of the liner in order to gain access to the back of the machine screw (#012027) and secure it with a flat washer (#018070), a lock washer (#024001) and a hex nut (#025003).
10. Reinstall factory push pin on underside of the fender.
11. Repeat procedure for the passenger side.

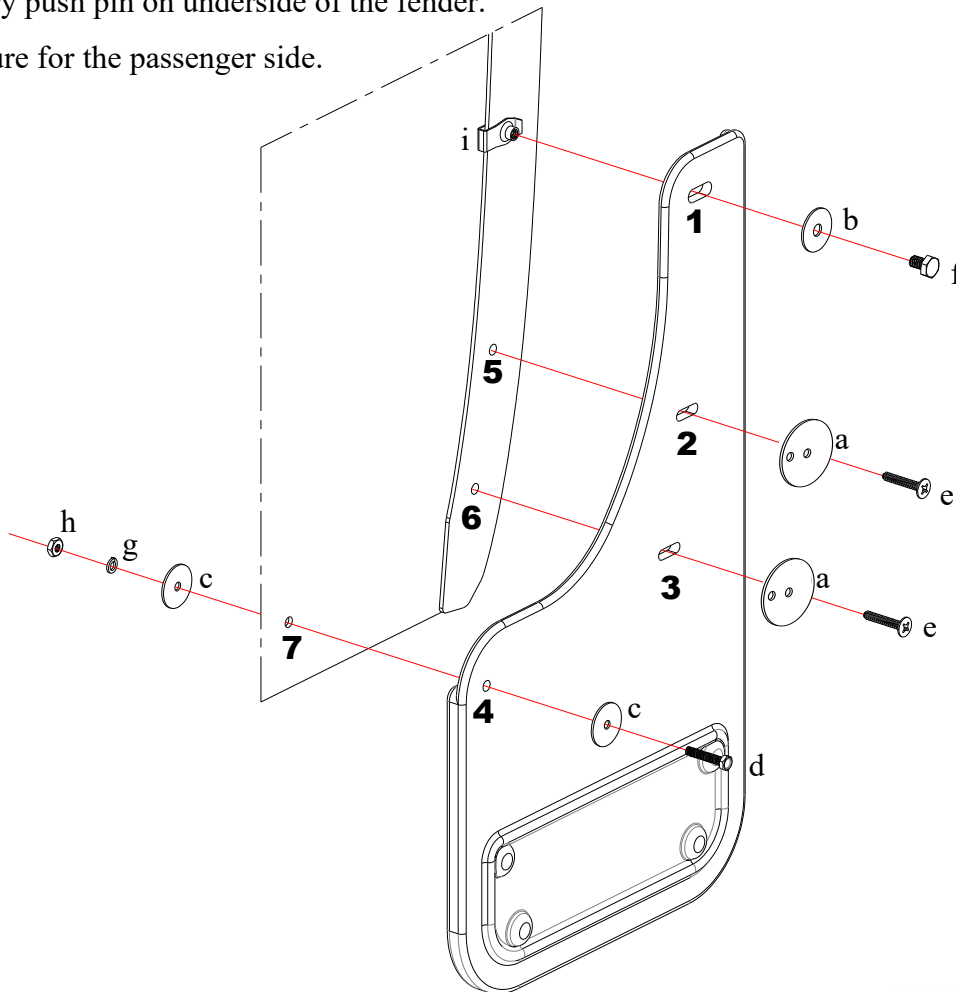

Please check out our YouTube channel to see an install video for this application.






## 2015-C Nissan Murano Mud Flap Set, Rear Mounting Diagram & Instructions Kit# GCR54R

### IMPORTANT:


*Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.*




### TOOLS REQUIRED-

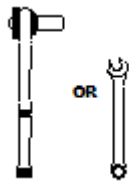


5/16" Open Wrench or  
Socket Wrench



Phillips Head  
Bit

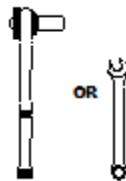

3/8" Open Wrench or  
Socket Wrench

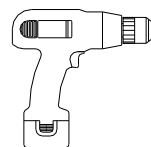


Electric or Rechargeable  
Drill




1/4" Drill  
Bit

### FLAPS

(1) Flap Assembly,  
Rear, DS

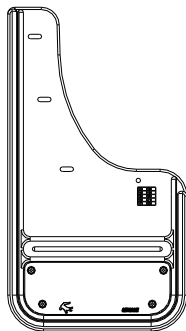


(1) Flap Assembly  
Rear, PS

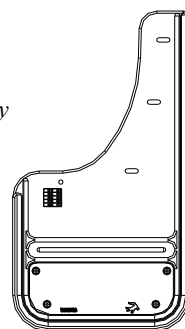


### PARTS BAG # 768470

**a)** (6) Washer, Flat  
0.203" x 1.5", Blk Oxid.  
Part #018080




**b)** (4) Washer, Flat  
0.203" x 1", Blk Oxid.  
Part #018070



**c)** (6) Screw, SM  
#10-12 x 1-1/4", SS  
Part #010027



**d)** (2) Screw, Machine  
18-8SS, 10-24x1, Hex Hd  
Part #012022



**e)** (2) Nut, Hex  
#10-24, SS  
Part #025003



**f)** (2) Washer, Lock  
18-8, Helicoil, SS  
Part #024001




### INSTALLATION (For ease of installation it is suggested that the wheel be removed)

- Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Start on driver's side.
- Remove the factory screws from the inner wheel well, and the underside of the fender in order to remove the factory splash guard. Reinstall the factory screw on the underside of the fender.
- Loosely install the mud flap through holes #1 to #3 into the existing factory holes #5 to #7 using a stainless steel screw (#010027), and a 1.5" black stainless steel washer (#018080).
- Using a bubble level or square, ensure that the mud flap is level. Viewing the vehicle from the back, the outer edge of the mud flap should appear parallel to the tires. Tighten all fasteners.



5. Hold the mud flap firmly to the liner and drill a ¼” hole through the mud flap hole #4 create hole #8 in the liner. Install the mud flap hole #4 to the liner hole #8 using a machine screw (#012022) and flat washer (#018070) and secure it with a flat washer (#018070), a lock washer (#024001) and a hex nut (#025003).
6. Repeat procedure for the passenger’s side.

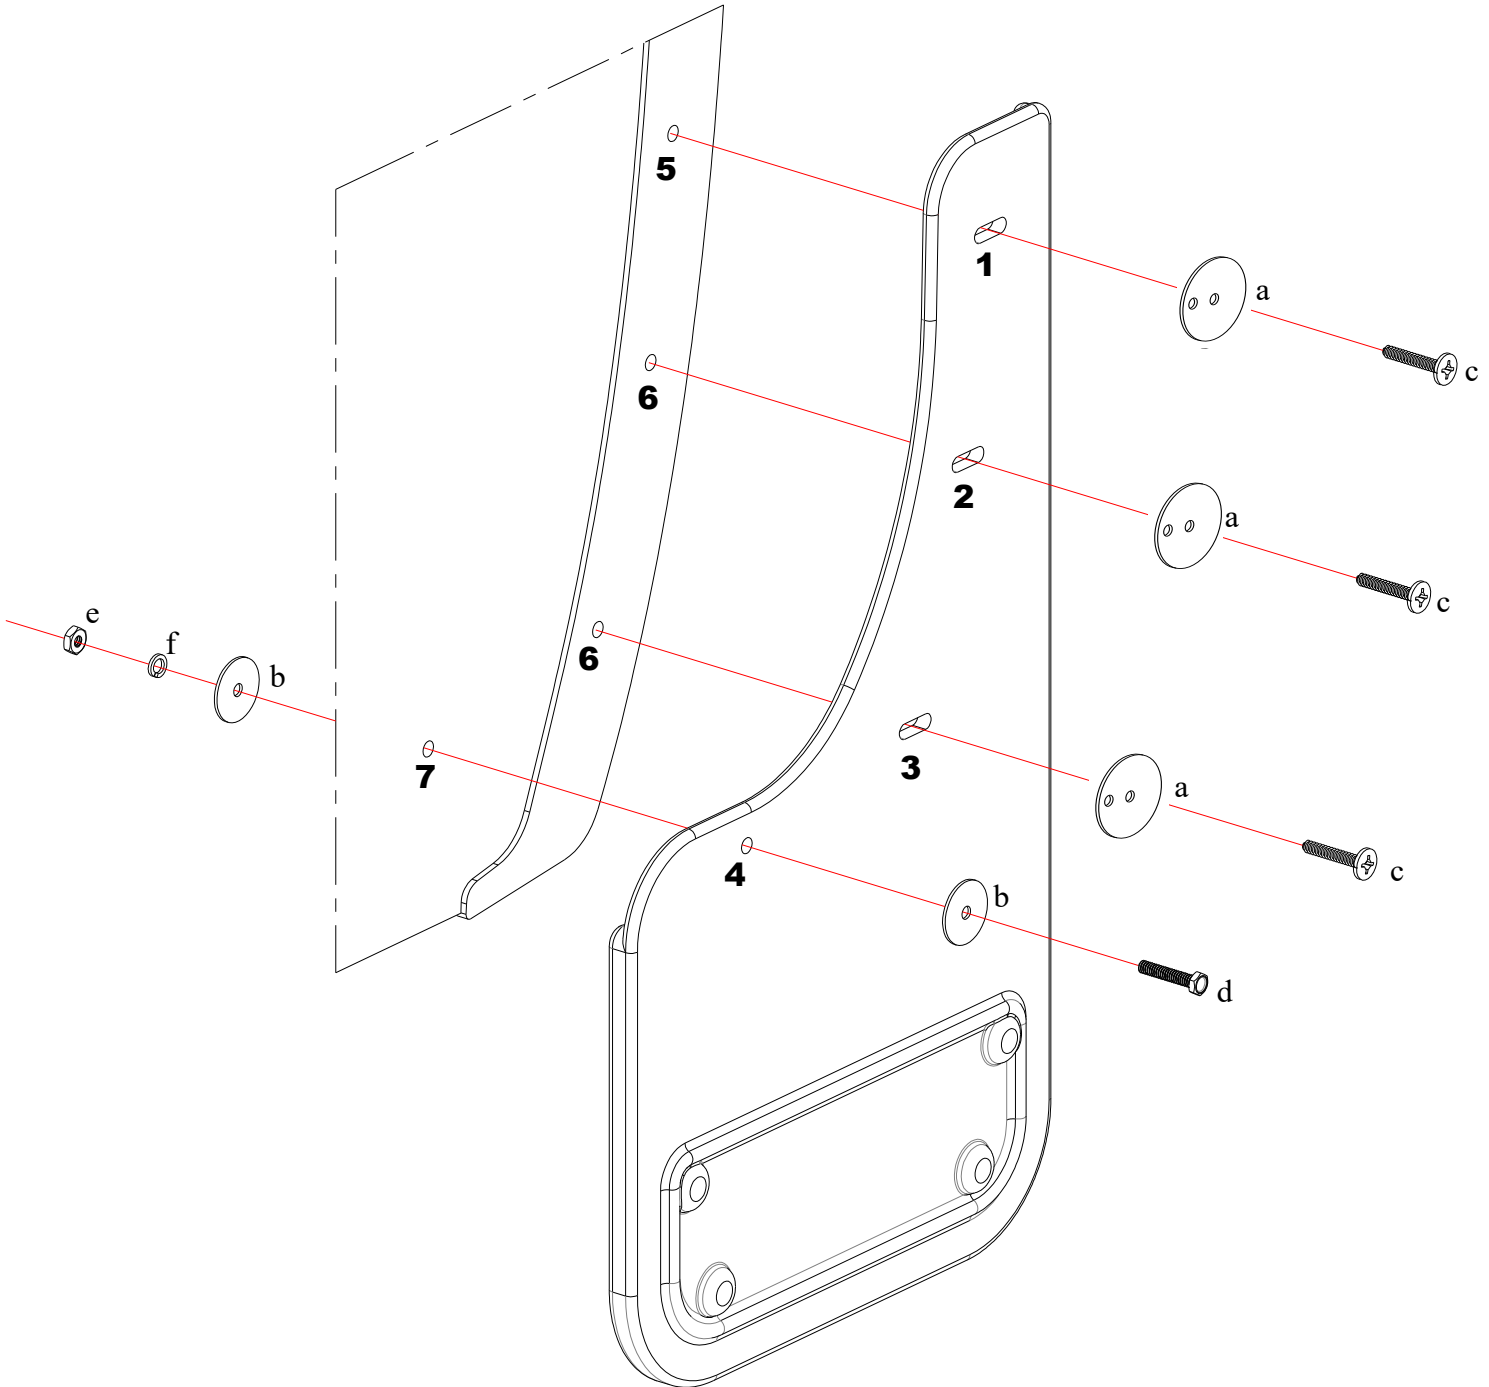

Please check out our YouTube channel to see an install video for this application.

