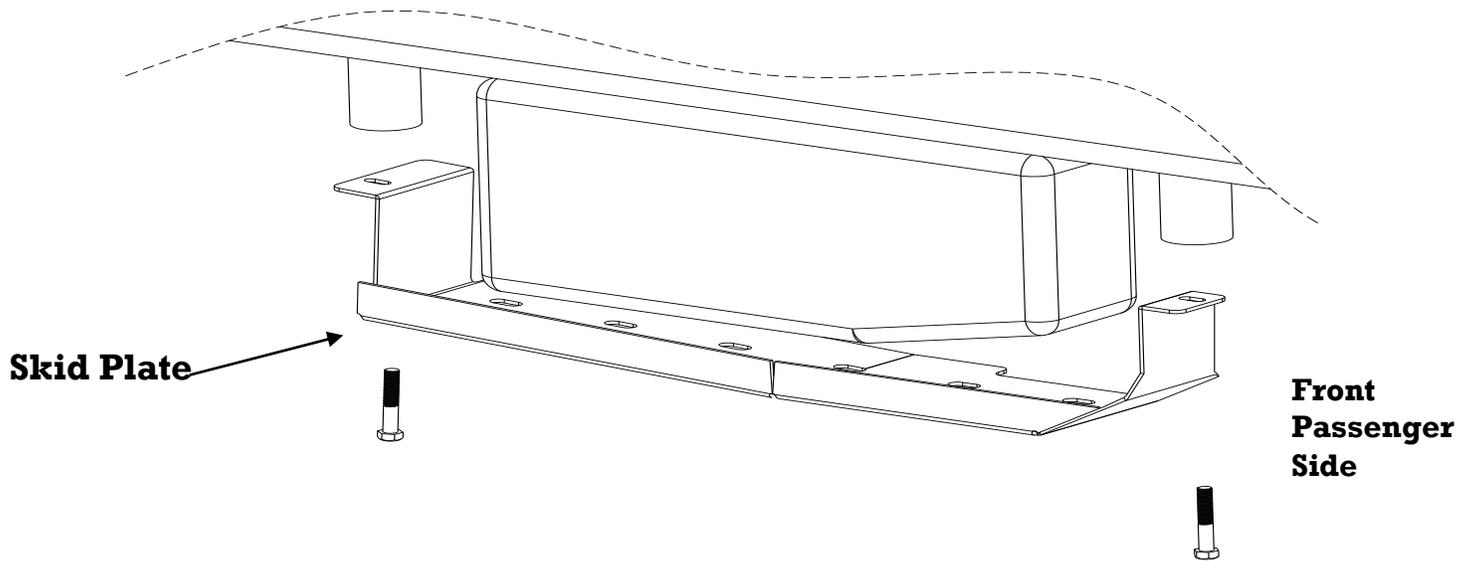

IMPORTANT:

**Manufacturer is not responsible for negligent use of vehicle with Skid Plate installed,
Including over-tightening of bolts causing damage to vehicle or Skid Plate.**



Product may vary slightly from diagram

Installation: Remove factory cab mount bolts; place the skid plate over the Factory Urea Tank Cover. Reinstall factory bolts and tighten.

IMPORTANT: *Inspect factory bolts, Ensure that they are tight! Inspect occasionally to ensure that they remain tight.*