




**2020-C Sierra HD
Mud Flap Set, Front
Mounting Diagram & Instructions
Kit# GCR200F**


IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.


TOOLS REQUIRED:

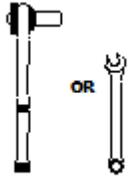

*1/4" Open Wrench or
Socket Wrench*




*T15 Torx
Bit*

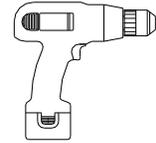


*Electric or Rechargeable
Drill*

FLAPS:

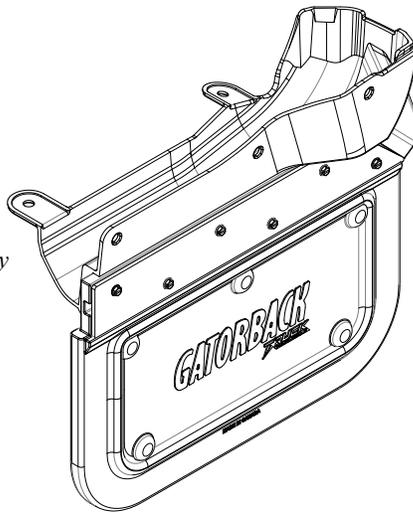

*(1) Flap Assy
Front, DS*

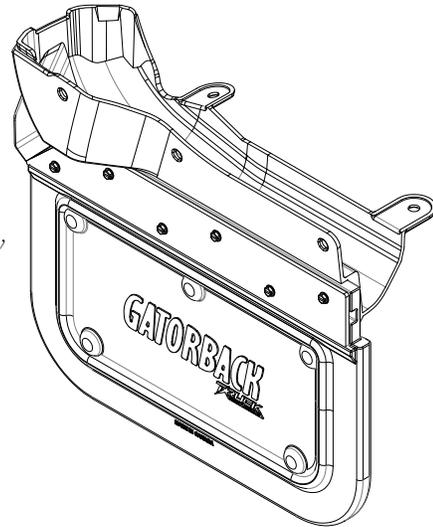


*(1) Flap Assy
Front, PS*

PARTS BAG #770710

a) (10) Screw, Blk Ox
*1/4" Hex Head, #8-18x1"
Part # 016055*



b) (10) Washer, Flat
*0.203" x 0.781", SS, Black Oxidized
Part # 018085*




Please check out our YouTube channel to see an install video for this application.





INSTALLATION *(For ease of installation it is suggested that the wheel be removed)*

1. Remove the 5 factory screws from the existing factory guard.
2. Gently pull the guard from the truck.
3. Position cap, ensuring the top lip of the cap slides under the fender molding.
4. Install the finishing cap to the factory holes using supplied screws and washers. Be careful not to overtighten.
5. Repeat procedure on passenger side.

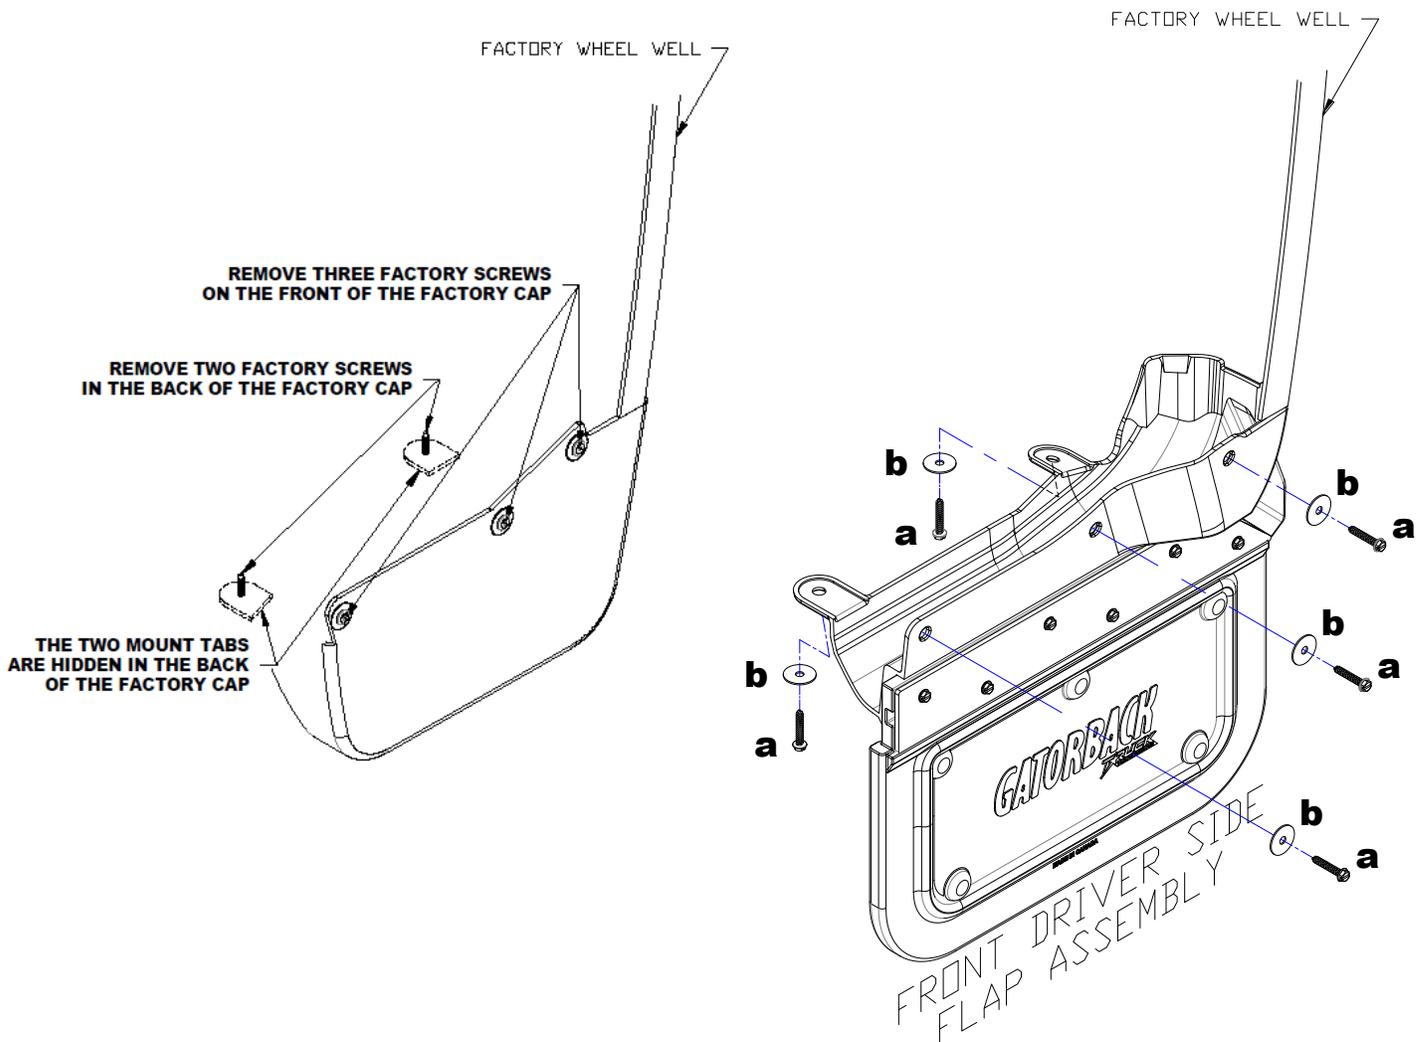


Please check out our YouTube channel to see an install video for this application.




IMPORTANT :

Le fabricant n'est pas responsable de l'utilisation négligente du véhicule avec des garde-boue installés, y compris du serrage excessif des vis et des boulons causant des dommages au véhicule ou aux bavettes de garde-boue.


OUTILS REQUIS:

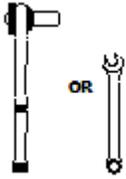

Clé ouverte ou
clé à douille de 1/4"




Foret Torx T15

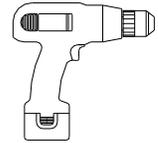


Perceuse électrique ou
rechargeable

RABATS :

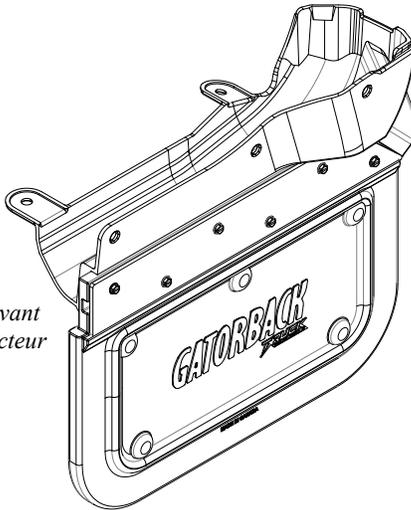

(1) Rabat, avant
siège conducteur

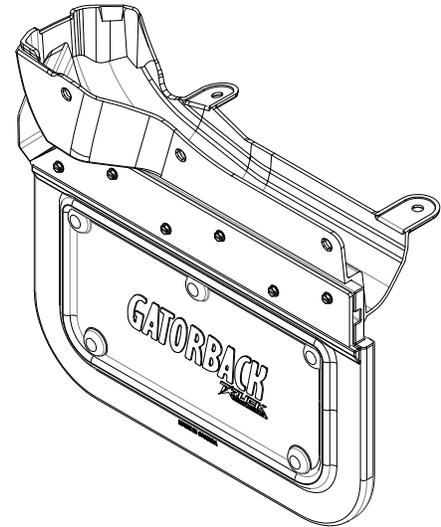


(1) Rabat, avant
siège passager

SAC DE PIÈCES N° : 770710

a) (10) Vis, oxyde noir
tête hexagonale 1/4" N° 8-18x1"
Pièce N° 016055



b) (10) Rondelle, plate
0.203" x 0.781", oxyde noir
Pièce N° 018085



Veuillez consulter notre chaîne YouTube pour voir une vidéo d'installation de cette application.







INSTALLATION *(Pour faciliter l'installation, il est suggéré de retirer la roue)*

1. Retirez les 5 vis d'usine de la protection d'usine existante.
2. Retirez doucement la protection du chariot.
3. Positionnez le capuchon en vous assurant que la lèvre supérieure du capuchon glisse sous la moulure du garde-boue.
4. Installez le capuchon de finition dans les trous d'usine à l'aide des vis et des rondelles fournies. Attention à ne pas trop serrer.
5. Répétez la procédure côté passager.

Retirez les 5 vis d'usine de la protection d'usine existante.

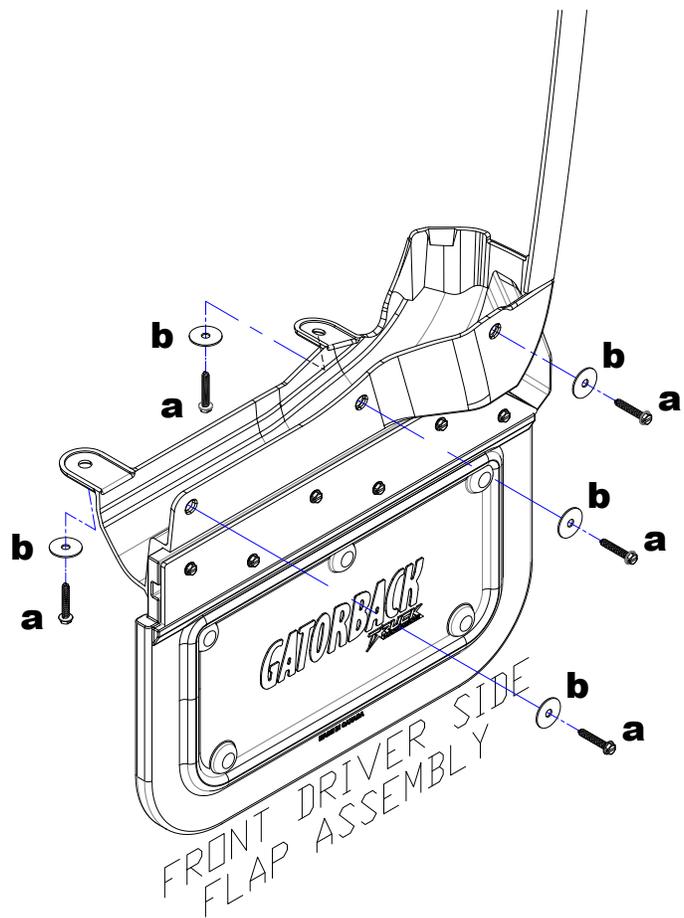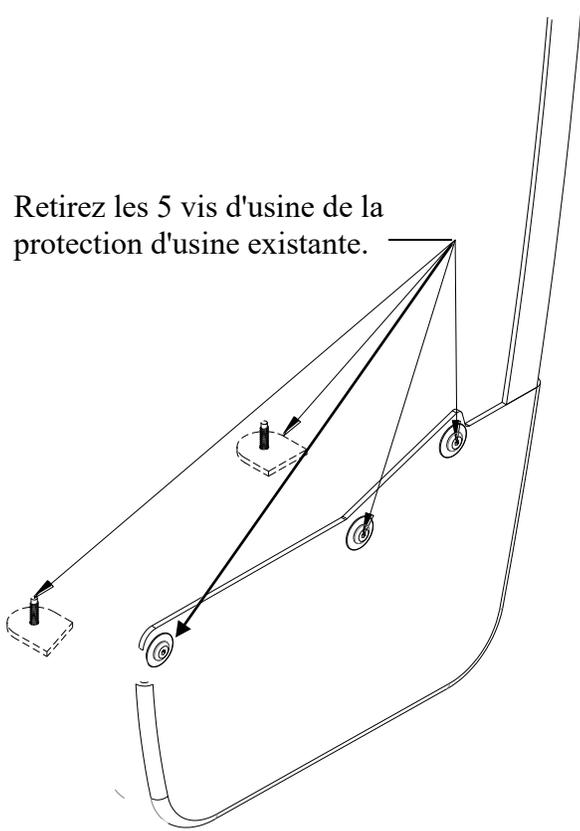

Veuillez consulter notre chaîne YouTube pour voir une vidéo d'installation de cette application

