



Bushwacker Flare Inserts

2015 FORD F150
For Bushwacker Flare # 20935-02,
Front Wheel, back
Mounting Diagram & Instructions
Kit# 700334

IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with Bushwacker flare inserts installed, including misuse of rivets causing damage to vehicle, Bushwacker flare or the inserts.

TOOLS REQUIRED-



*Electric or Chargeable
1/2" or 3/8" Drill*



3/8" Socket Driver




1/8" Drill Bit



Rivet Gun

FASTENERS / INSERT PLATES - Kit # 700334

*a) (2) Bushwacker Flare Insert Plate,
Part # 702257*




*b) (18) Rivet, Aluminum
1/8" X 5/16"
Part #016004*



INSTALLATION

1. Before you install your Precision Bushwacker Flare Inserts, see the diagram and parts list for all necessary parts. Start on the driver's side.
2. Put the insert plate against the inner side of the flare corner which locates at the **back of the front wheel**. Adjust the position of the insert plate so that the plate aligns with the shape of the flare and leaves no part visible from outside. Mark the hole positions (9) on the flare according to the holes on the insert plate.
3. Drill 1/8" diameter holes (9) on the Bushwacker flare according to the markings.
(It's optional to use proper glue between the flare and insert plate.)
4. Use a rivet gun and (9) rivets # 016004 to fasten the insert plates with the flare.
5. Repeat procedure for the passenger side.

INSTALLATION DIAGRAM

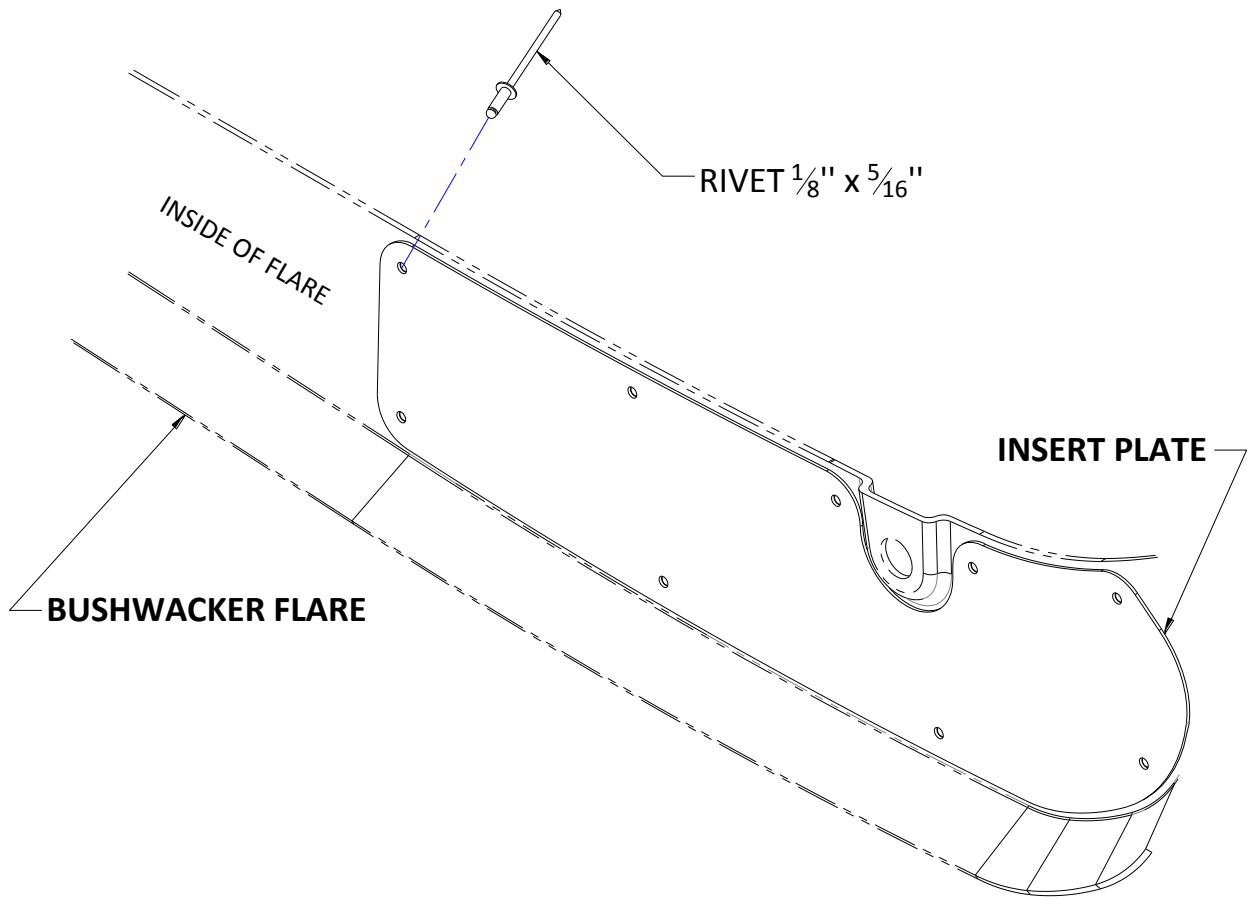

Note:

The quantity of the rivets, the shape of the insert plate and the flare may vary from different models.

IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with Bushwacker Flare Inserts installed, or misuse of rivets causing damage to vehicle, bushwacker flare or the inserts.



Bushwacker Flare Inserts

2015 FORD F150
For Bushwacker Flare # 20935-02,
Rear Wheel, back
Mounting Diagram & Instructions
Kit# 700335

IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with Bushwacker flare inserts installed, including misuse of rivets causing damage to vehicle, Bushwacker flare or the inserts.

TOOLS REQUIRED-



*Electric or Chargeable
1/2" or 3/8" Drill*



3/8" Socket Driver




1/8" Drill Bit



Rivet Gun

FASTENERS / INSERT PLATES - Kit # 700335

*a) (2) Bushwacker Flare Insert Plate,
Part # 702258*




*b) (20) Rivet, Aluminum
1/8" X 5/16"
Part #016004*



INSTALLATION

1. Before you install your Precision Bushwacker Flare Inserts, see the diagram and parts list for all necessary parts. Start on the driver's side.
2. Put the insert plate against the inner side of the flare corner which locates at the **back of the rear wheel**. Adjust the position of the insert plate so that the plate aligns with the shape of the flare and leaves no part visible from outside. Mark the hole positions (10) on the flare according to the holes on the insert plate.
3. Drill 1/8" diameter holes (10) on the Bushwacker flare according to the markings.
(It's optional to use proper glue between the flare and insert plate.)
4. Use a rivet gun and (10) rivets # 016004 to fasten the insert plates with the flare.
5. Repeat procedure for the passenger side.

INSTALLATION DIAGRAM

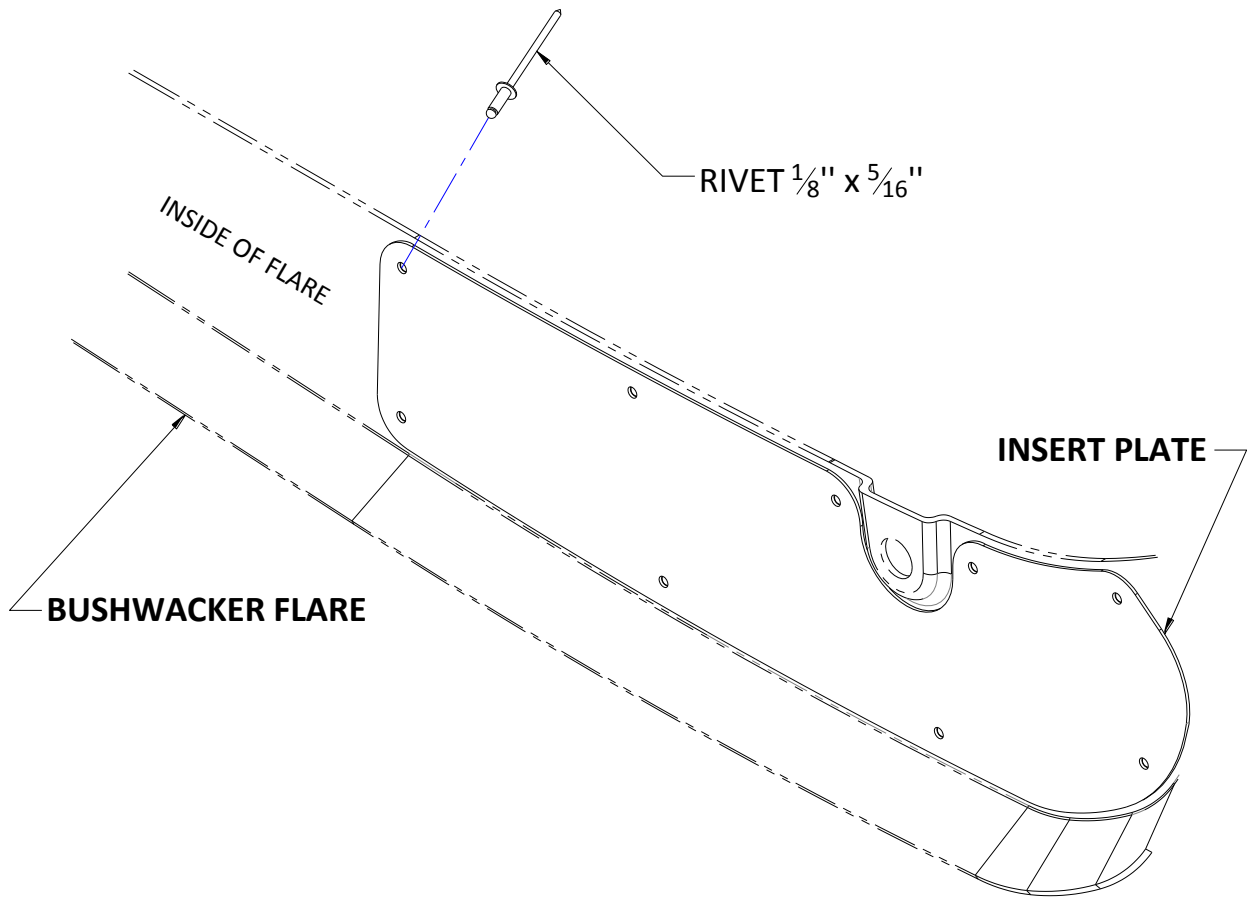

Note:

The quantity of the rivets, the shape of the insert plate and the flare may vary from different models.

IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with Bushwacker Flare Inserts installed, or misuse of rivets causing damage to vehicle, bushwacker flare or the inserts.