

IMPORTANT:

The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.


TOOLS REQUIRED:



Electric or Chargeable
1/2" or 3/8" drill



#2 Phillips screwdriver



11/32" wrench or
socket wrench




5/16" Socket Driver

KIT CONTAINS: PARTS BAG #755437

a) (1) Mount Bracket,
Rear, LH
Part #755435



b) (1) Mount Bracket
Rear, RH
Part #755436



c) (6) Machine Screw
#8-32 x 7/8"
Part #012025



d) (6) Flat Washer
0.188" x 0.781"
Part #018018



e) (6) Nylock Nut
#8-32
Part #025005



e) (6) Flat Washer
0.203 x 1"
Part #018031



f) (6) Screw, TEK
#10 x 1"
Part #010009



INSTALLATION

For ease of installation, it is suggested that the wheel be removed.

1. Fasten the LH mount bracket to the left hand flap with 3 machine screws / small washers and nylock nuts to Holes #1, #2 and #3 or, if you prefer the flap mounted higher and farther away from the ground then use Holes #4, #5 and #6. See Diagram #1.

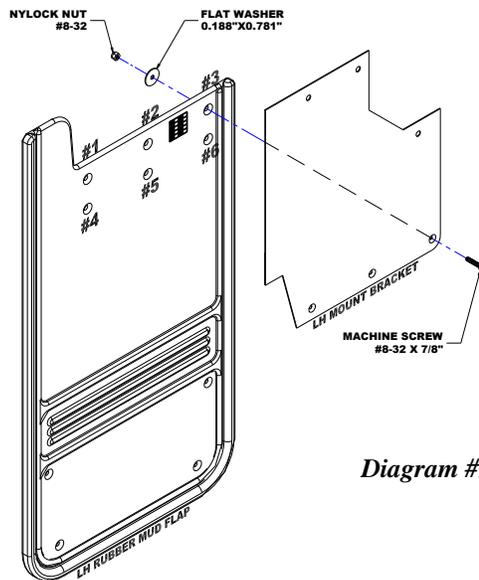


Diagram #1

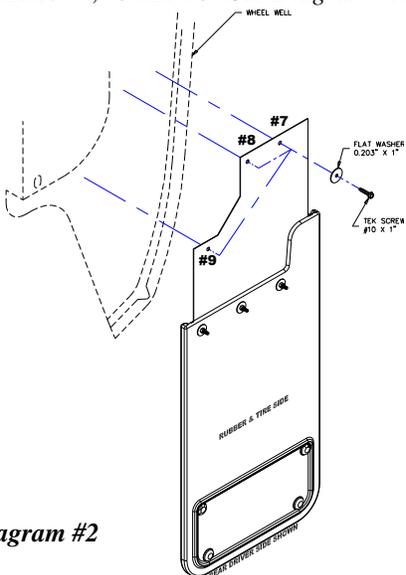


Diagram #2

2. Secure the bracket on Holes #7, #8, and #9 through the fender body with 3 TEK screws and washers. See Diagram #2.

✓ Check all fasteners for tightness. Repeat procedure on the other side.