



**2014-18, CHEV 1500 Front
15-19 CHEV HD Front
Mud Flap Set, 5/8" Offset, Front
Mounting Diagram & Instructions**

IMPORTANT:

The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.




TOOLS REQUIRED:



Electric or re-chargeable
1/2" or 3/8" drill.



1/4" Drill Bit




5/16" Socket Driver
& 3/8" Open Wrench




#15 Torque Screwdriver

FLAPS:

(1) Flap Assembly,
Driver's Side

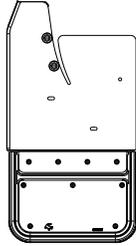

(1) Flap Assembly
Passenger Side

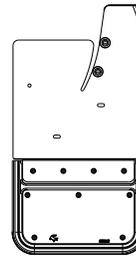

PARTS BAG #766018

a) (12) Washer, Flat, SS
0.203" x 1.00"
Part #018031



b) (2) Washer, Lock
18-8SS, #10
Part #024001



c) (2) Machine Screw, SS
#10 x 1"
Part # 012022



d) (8) Screw, Sheet Metal
M4.2-1 x 28mm, WHH
Part #016041




e) (2) Nut, Hex
SS, #10
Part #025003



INSTALLATION (For ease of installation it is suggested that the wheel be removed)

1. Before you install your Mud Flap Set, see the Diagram and parts list for all necessary parts. Cut protective plastic and peel away from stainless steel. Start on the Driver's Side.
2. Remove four (4) factory screws on the wheel well as shown on the diagram and replace each screw with a flat washer and an M4.2x28mm screw on holes #1 to #4 through the factory holes #6 to #9. Loosely secure at this point.
3. Square the flap with the tire while putting pressure against the wheel well and tighten the four (4) screws on holes #1 to #4.

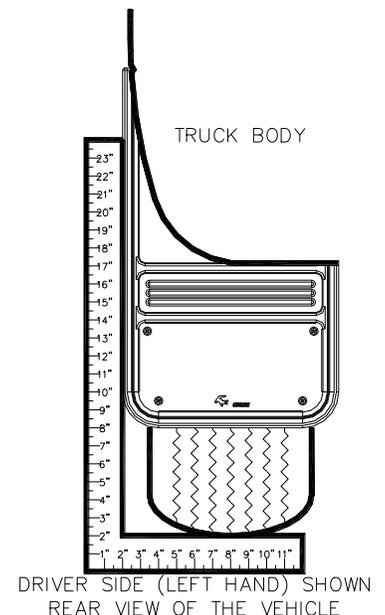

4. Drill 1/4" hole (1) from hole #5 through the factory plastic liner and secure the hole with a #10x1" machine screw, two flat washers, one lock washer, and one hex nut.
5. Repeat procedure for the passenger side.

