



INSTALLATION *(For ease of installation it is suggested that the wheel be removed)*

1. Remove the 5 factory screws from the existing factory guard. Set this hardware aside for later reinstallation.
2. Gently pull the guard from the truck.
3. Position cap, ensuring the top lip of the cap slides under the fender molding as shown and reinstall factory hardware.
4. Repeat procedure on passenger side.

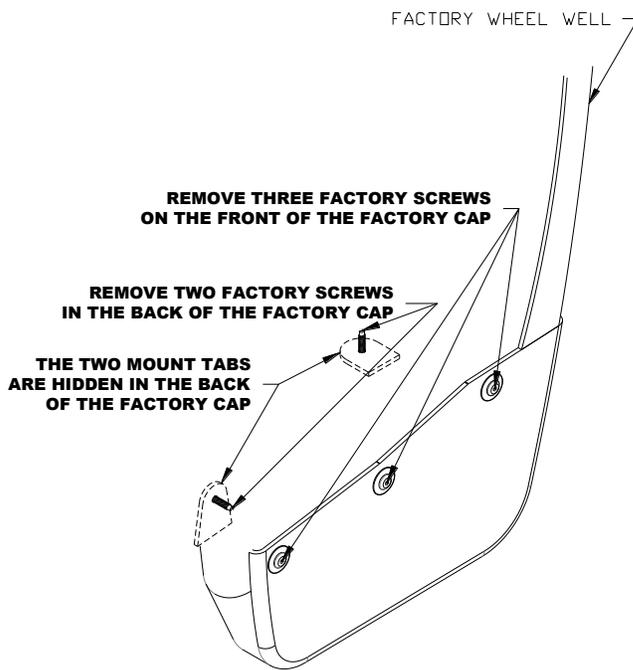

FACTORY CAP (GUARD) DRIVER SIDE SHOWN

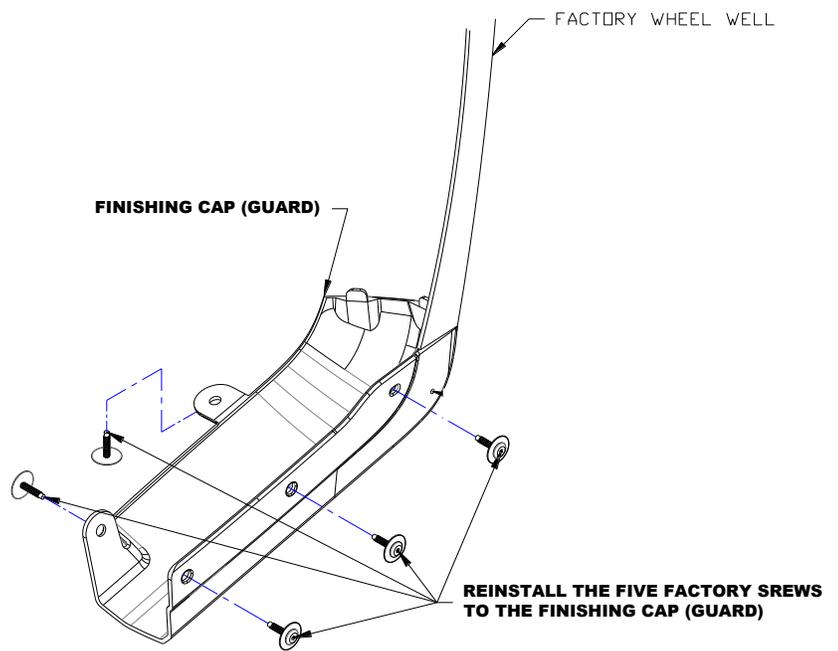

FINISHING CAP (GUARD) DRIVER SIDE SHOWN

*Universal Instructions: Diagram of parts may vary due to application differences.

Please check out our YouTube channel to see an install video for this application.

