




**STEP BAR FILLER
INSTALLATION INSTRUCTIONS
AND MOUNTING DIAGRAM
2020 SILVERADO / SIERRA, 2500 / 3500
PART #G758538 & G758539**

Note: Gatorgear Bar Fillers are manufactured to be used with OE 6" Rectangular Assist Steps Only.

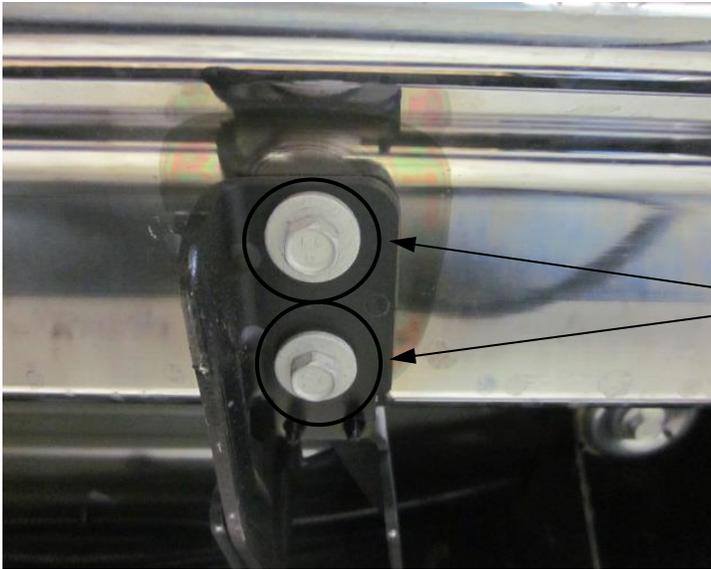

Start installation by peeling off the plastic cover and apply bulb seal on the top edge. Make sure you get the right side of the filler. See sticker on the parts and start on the driver's side.

Remove OEM Factory bolts or nuts from the Factory Step Bar.
See Image #1.

Image #1



Set Bar aside and place Bar Filler as shown on **Image #2.**

Image #2



Image #3

Place the included washers on the front hole of each bracket. See **Image #3**.



Image #4

Replace Factory Bar over the stainless steel filler and align mounting holes. See **Image #4**

Reinstall the OEM Factory bolts or nuts and tighten.

Repeat process for passenger side.