




2021 FORD BRONCO 4 DOOR STEP BAR FILLER INSTALLATION INSTRUCTIONS PART #G758542

** For Bronco - Additional center mounts are for optional board modifications.
Contact Truck Hardware for more details.

TOOLS:



Electric or Rechargeable
Drill



10mm Open or Socket Wrench





10mm Socket Driver

Note: Gatorgear Bar Fillers are manufactured to be used with OE Steps Only.

INSTALLATION:

1. Remove the Step Bar from the Driver's side by removing the factory bolts or nuts. Set Step Bar aside.
2. Ensure both Steps and Brackets are clean and free of debris.
3. Perform a dry fit to ensure proper alignment and ensure u-nuts in step are in place and secure.
4. Remove frisket from Bar Filler and install bulb seal along the top edge.
5. Place Bar Filler on brackets, aligning holes.
6. Reinstall the Step Bar over the Bar Filler using the factory bolts or nuts.
7. Repeat on passenger side.

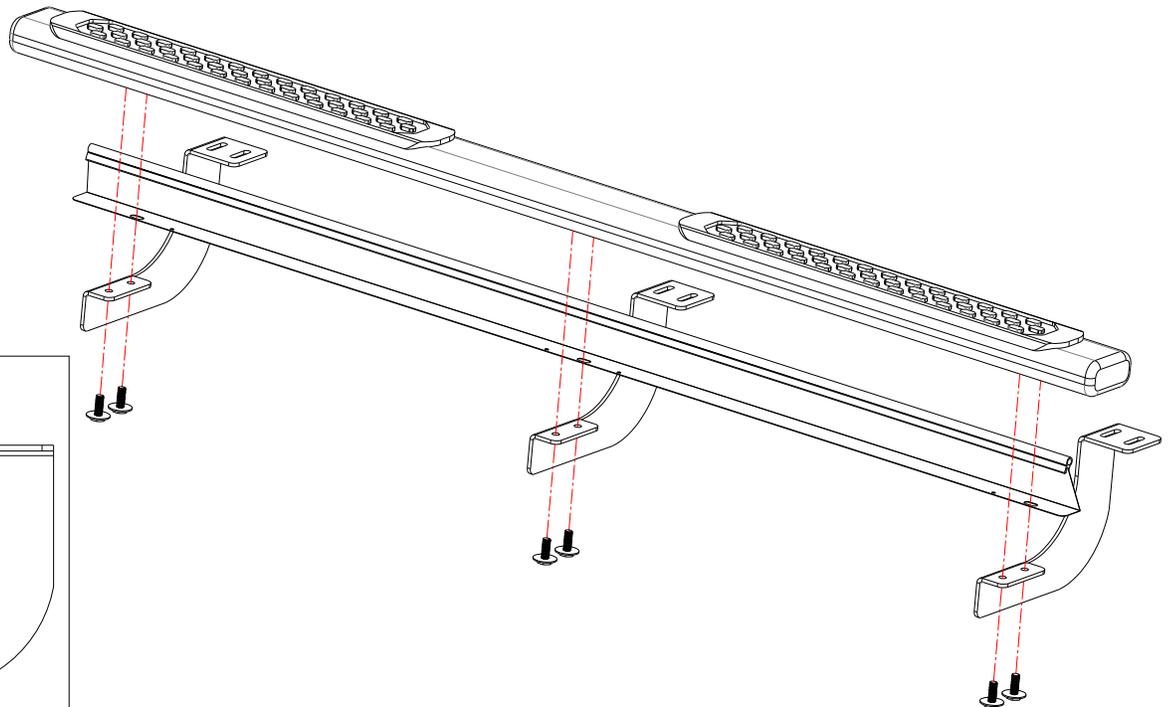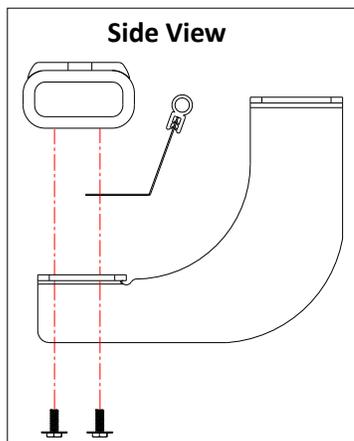

*Universal Mounting Diagram: Parts may vary due to application differences.