



KIT INCLUDES:

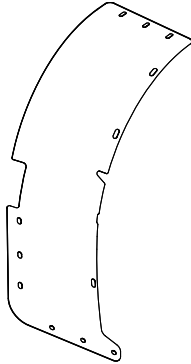

(2) Rear Wheel Liner Front
Part#702352

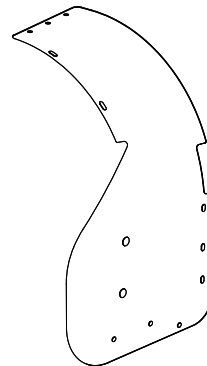


(2) Rear Wheel Liner Rear
Part#702519


TOOLS:



Push Pin Pry Tool



5/16" Socket Wrench



a) (16) Black SS Sheet
Metal Screw 1"
Part #016041



b) (16) Aluminum Flat
Washer 1"
Part #018053



c) (16) Spring Nut
Part #028004


PARTS BAG: #702354

INSTALLATION INSTRUCTIONS


1. Review instructions & ensure all parts are included prior to install.
2. Start on the driver side. Remove the factory liner by removing push pins, & factory screws. Keep aside for later reinstallation.





2 continued...
Remove hardware shown here.

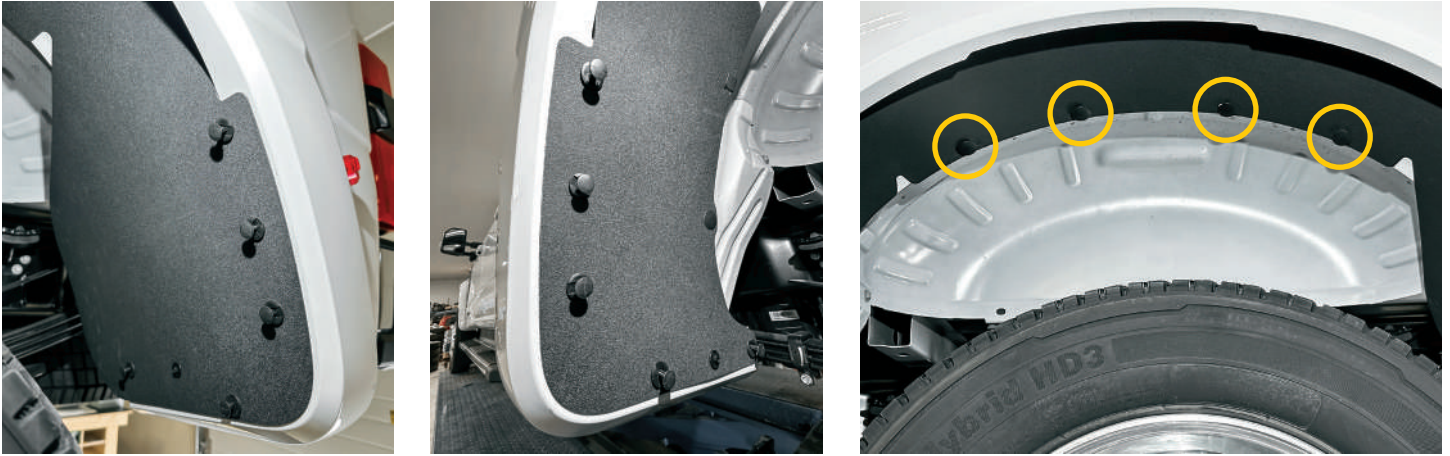


3. Leave the factory spring nuts in place on the front & rear.

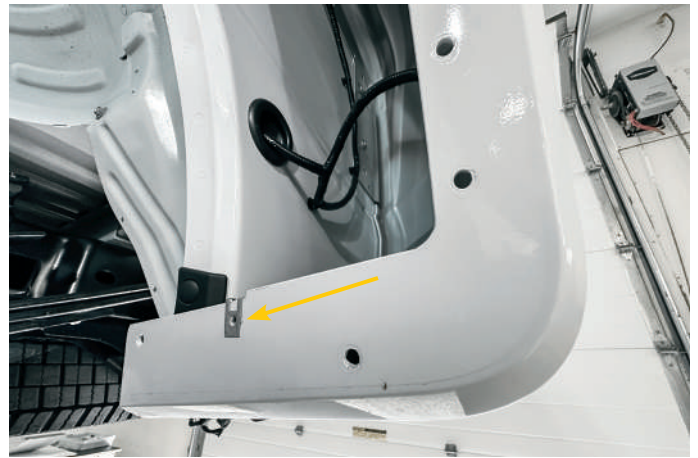

4. Install 3 spring nuts on the top of the rear wheel liner.

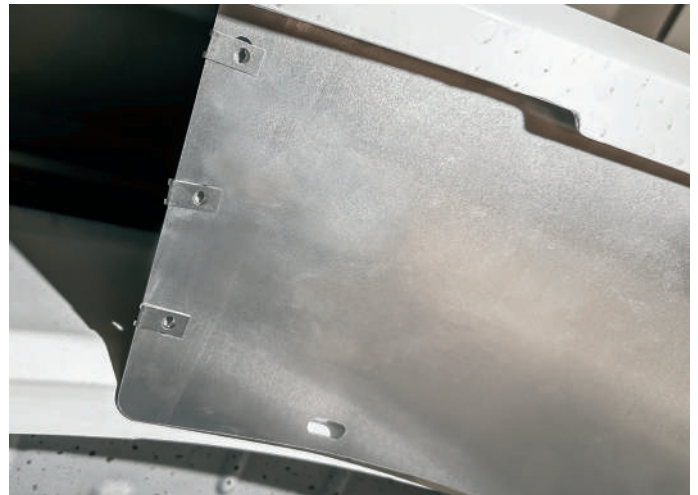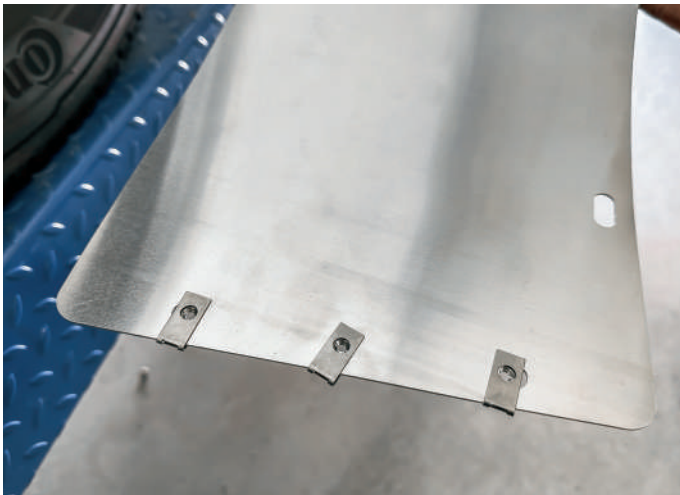

5. Install 5 spring nuts on the inside wheel hub edge.

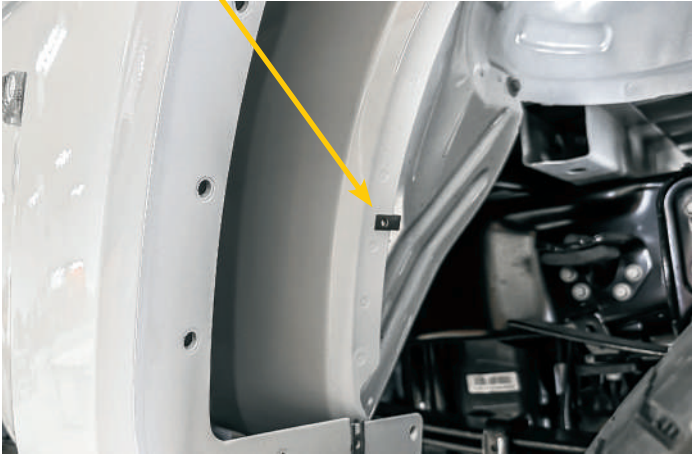

6. Lightly handroll the supplied liner to shape with the wheel well.


7. Start with the rear liner & begin installing it using the factory hardware removed in step 2. Start from the bottom & work your way up. Do the same for the front piece.



8. Loosly install the liner using the remaining holes along the edge using sheet metal screw (a) & flat washer (b).



9. Now, loosely secure the top end of the front liner to the top end of the rear liner with 3 sheet metal screws (a) & flat washers (b).

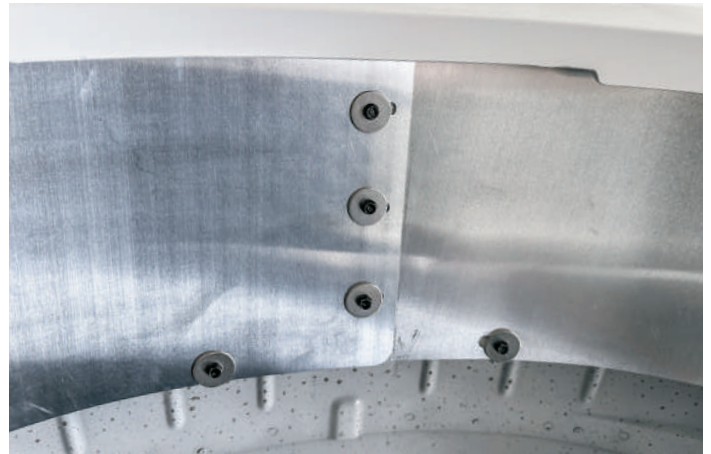

10. Now that everything is in place, tighten all fasteners. Repeat the process on the passenger side.

