



2017 Nissan Titan Mud Flap Set, 5/8" Offset, Rear Mounting Diagram & Instructions

IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.


NO-DRILL SYSTEM

TOOLS REQUIRED-



Phillips Screw Driver


PARTS BAG #759986




(6) Washer, Nylon
0.318" x 1"
Part #054061

FLAPS

(1) Flap Assembly,
Rear, DS
Part #759994

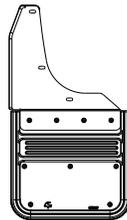

(1) Flap Assembly
Rear, PS
Part #759995

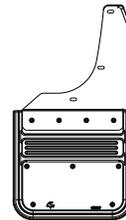

INSTALLATION *(For ease of installation it is suggested that the wheel be removed)*

1. Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Cut the protective plastic and peel away from the stainless steel. Start on the driver's side.
2. Remove the factory bolt #4 on the wheel well and reinstall with a nylon washer through hole #1 on the stainless steel panel. Loosely secure at this point
3. Remove the factory screws #5 & #6 on the wheel well and reinstall each screw with a nylon washer through holes #2 & #3 on the stainless steel panel. Loosely secure at this point.
4. Square the flap with the tire and push the flap up against the wheel well, then tighten all factory screws on holes #1 to #3.
5. Repeat procedure for the passenger side.

