



2017-22, FORD SUPER-DUTY DUALY

Rear Wheel Filler, Aluminum

Mounting Diagram

Kit #P700362

IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with Fender Liner installed, including over-tightening of screws and bolts causing damage to vehicle or Fender Liner.

PARTS BAG #702354

- | | |
|---|---------------|
| (16) Sheet Metal Screw, SS, Blk M4.2x1" | Part # 016041 |
| (16) Flat Washer, 0.203" x 1", Alum. | Part # 018053 |
| (16) Spring Nut, #8, 9/16" | Part # 028004 |

ALUMINUM PARTS

- | | |
|-----------------------------|--------------|
| (2) Rear Wheel Liner, Front | Part #702352 |
| (2) Rear Wheel Liner, Rear | Part #702353 |

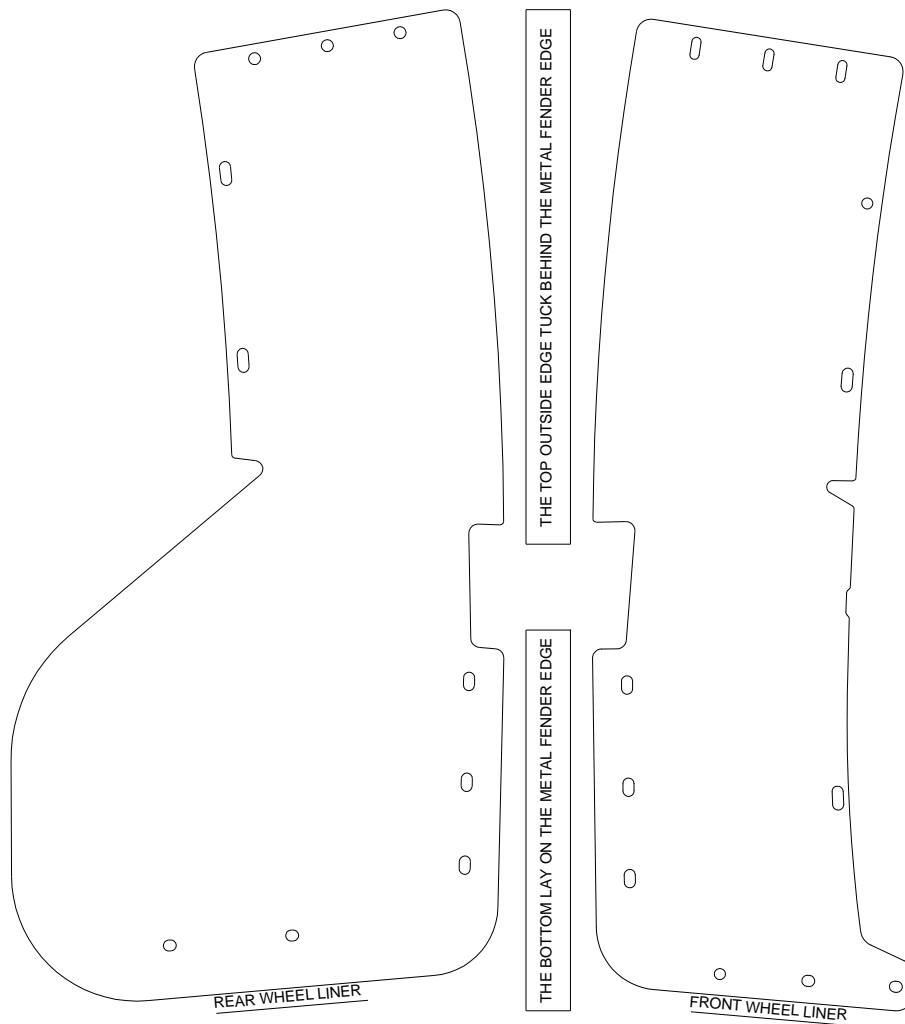



DIAGRAM #1


Please check out our YouTube channel to see an install video for this application.



INSTALLATION INSTRUCTIONS

1. BEFORE YOU INSTALL YOUR PRECISION REAR WHEEL LINERS, SEE THE DIAGRAM AND PARTS LIST FOR ALL NECESSARY PARTS. START ON THE DRIVER'S SIDE.
2. REMOVE THE FACTORY WHEEL LINER BY REMOVING TWO (2) FACTORY SCREWS, FIVE (5) FACTORY PUSH SCREWS, AND TEN (10) FACTORY PLASTIC PUSH PINS ON THE REAR OF THE FACTORY WHEEL LINER. SEE DIAGRAM #2.
3. INSERT EIGHT (8) SUPPLIED SPRING NUTS, FIVE (5) ON THE INSIDE WHEEL HUB EDGE AND THREE (3) ON THE TOP END OF THE REAR WHEEL LINER. SEE DIAGRAM #3.
4. HAND ROLL THE SUPPLIED WHEEL LINERS (FRONT AND REAR) TO THE SAME SHAPE AS THE REAR WHEEL WELL.
5. INSTALL THE NEW REAR LINER (DRIVER SIDE) THE SAME WAY AS PREVIOUSLY REMOVED IN STEP #2 WITH ONE (1) FACTORY SCREW AND FIVE (5) FACTORY PUSH PINS THEN LOOSELY SECURE THE INSIDE EDGE OF THE NEW REAR LINER WITH TWO (2) WASHERS AND TWO (2) SHEET METAL SCREWS. START FROM THE BOTTOM AND WORK YOUR WAY UP. SEE DIAGRAM #3.
6. REPEAT THE SAME PROCEDURE IN STEP #5, BUT WITH ONE (1) FACTORY SCREW, FIVE (5) FACTORY PUSH PINS, THREE (3) WASHERS AND THREE (3) SHEET METAL SCREWS.
7. LOOSELY SECURE THE TOP END OF THE FRONT LINER TO THE TOP END OF THE REAR LINER WITH THREE (3) WASHERS AND THREE (3) SHEET METAL SCREWS. SEE DIAGRAM #3.
8. ALL THE LOOSE FASTENERS FROM STEP #5 AND STEP #6 CAN NOW BE TIGHTENED, THEN TIGHTEN THE REMAINING THREE (3) FASTENERS ON TOP OF THE WHEEL LINERS (FRONT AND REAR LINERS).
9. REPEAT THE PROCEDURE FOR THE PASSENGER SIDE.

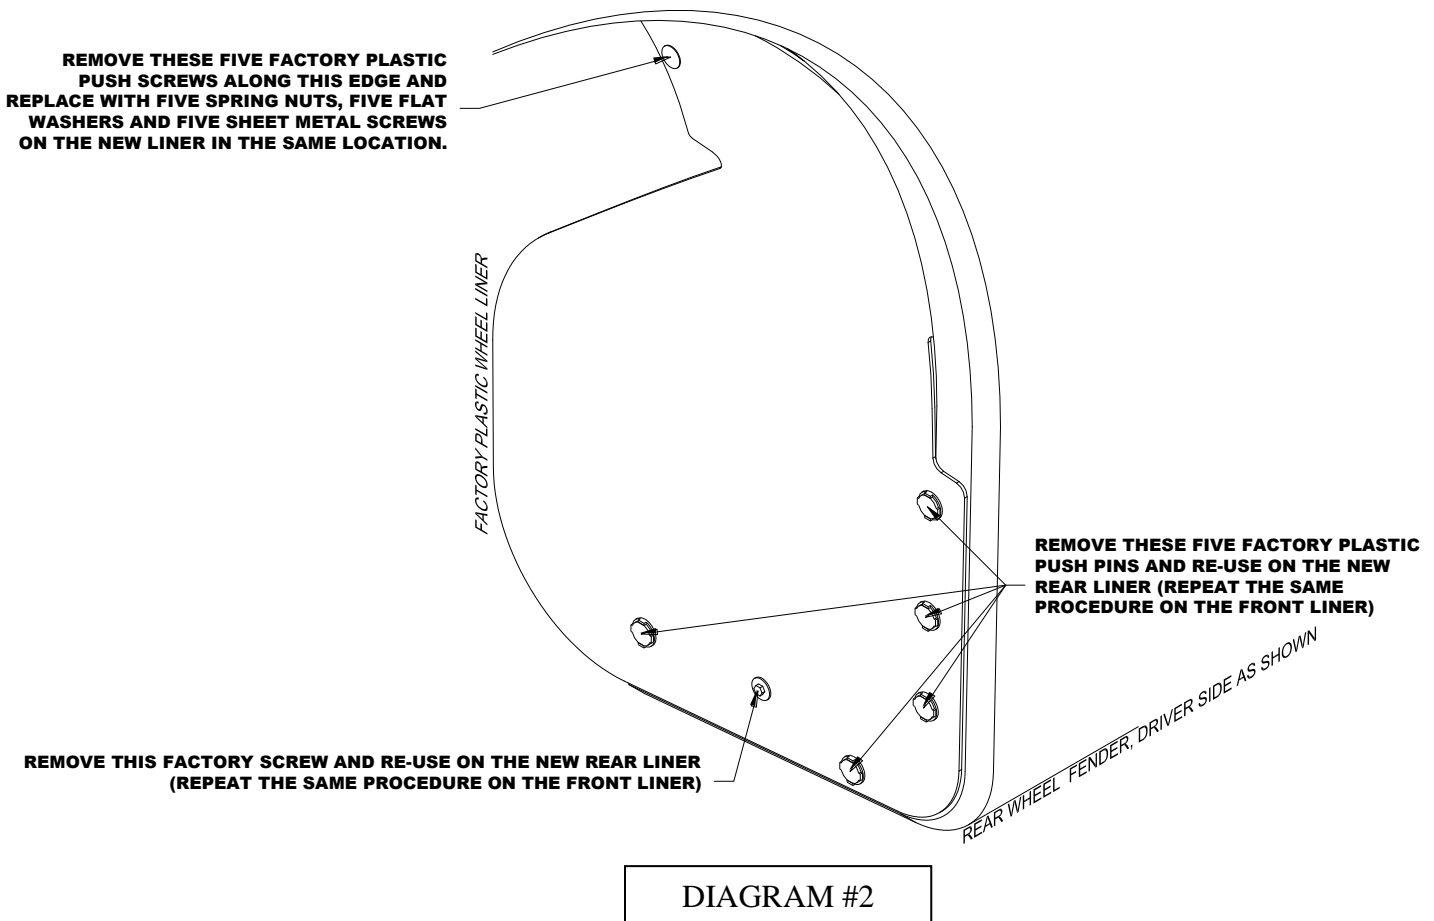

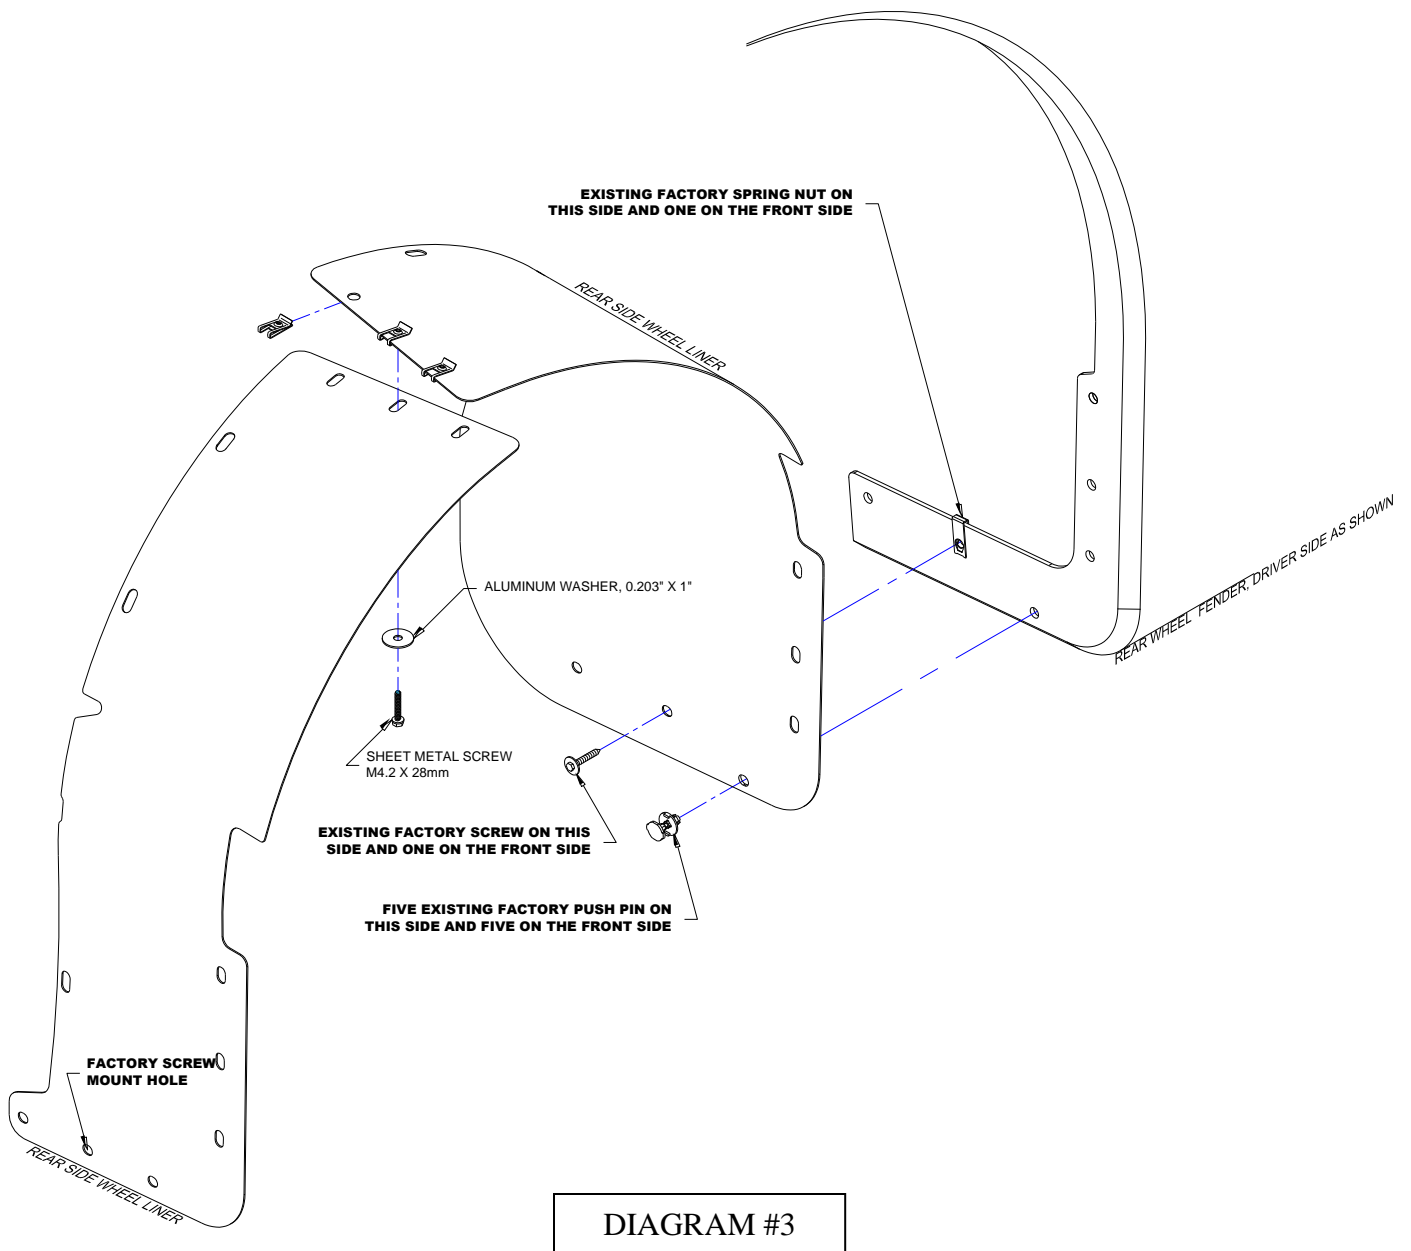

Please check out our YouTube channel to see an install video for this application.

