



**15-19, GM Denali/Tahoe  
15-19, Cadillac Escalade  
Mud Flap Set, 12", Straight, Front  
Mounting Diagram & Instructions  
Kit# 759173**

**IMPORTANT:**

**Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.**

**NO-DRILL SYSTEM**


**TOOLS REQUIRED-**



*Electric or Chargeable  
1/2" or 3/8" Drill*



*1/4" Drill Bit*




*7/16 & 5/16 & 3/8" Open End  
Wrench & Socket Wrench*




*T15 Screw Driver*

**FLAPS -**

*(1) Flap Assembly,  
Front, DS  
Part #759176*



*(1) Flap Assembly  
Front, PS  
Part #759177*



*(1) Bracket Assembly  
Front, DS  
Part #759184*



*(1) Bracket Assembly  
Front, PS  
Part #759185*



**PARTS BAG # 759175**

*a) (2) Screw, Machine  
#10 x 1", SS  
Part #012022*



*b) (8) Washer, Flat  
0.203" x 1", SS  
Part #018031*



*c) (2) Washer, Lock  
#10, Helicoil, SS  
Part #024001*



*d) (4) Washer, Flat  
0.203" x 0.781", SS  
Part #018018*



*e) (4) Cap Screw  
1/4 -20 x 5/8", SS  
Part #014006*



*f) (4) Washer, Flat  
0.281" x 1", SS  
Part #018028*



*g) (2) Hex Nut  
#10, SS  
Part #025003*




*h) (8) Bolt, Hex, SS  
M4.2 x 1"  
Part #016041*



**INSTALLATION** *(For ease of installation it is suggested that the wheel be removed)*

1. Before you install your Precision Mud Flap, see the diagram and parts list for all necessary parts. Cut the protective plastic and peel away from the stainless steel. Start on the driver's side.
2. Remove four (4) factory screws #6, #7, #8 & #9 from the wheel well as shown in the Diagram. Install bolts (016031) and washer (018018) on bracket slots #10 & #13, through the factory holes #6 & #7. Align the bracket with the wheel well edge, and secure the screws.

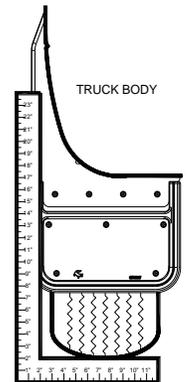


**DRIVER SIDE (LEFT HAND) SHOWN  
REAR VIEW OF THE VEHICLE**



3. Install two (2) cap screw #014006 and two (2) flat washer #018028 on stainless steel panel holes #1 & #2, through bracket holes #11 & #12. Loosely secure at this point.
4. Install 2 bolts (016041) and two washers (018031) on stainless steel panel holes #3 & #4, through the factory holes #8 & #9. Loosely secure at this point.
5. Square the flap with the tire, while putting pressure against the wheel well, then tighten the two (2) factory screws on holes #3 & #4 and two (2) cap screws on holes #1 & #2.
6. Drill ¼" hole (1), from hole #5 through the factory plastic liner and secure that hole with one (1) machine screw #012022, two (2) flat washers #018031, one (1) lock washer #024001 and one (1) hex nut #025003.

**Caution:** Insure that you have access from behind the factory plastic liner to install and tighten the washers and nuts before drilling.

7. Repeat procedure for the passenger side.

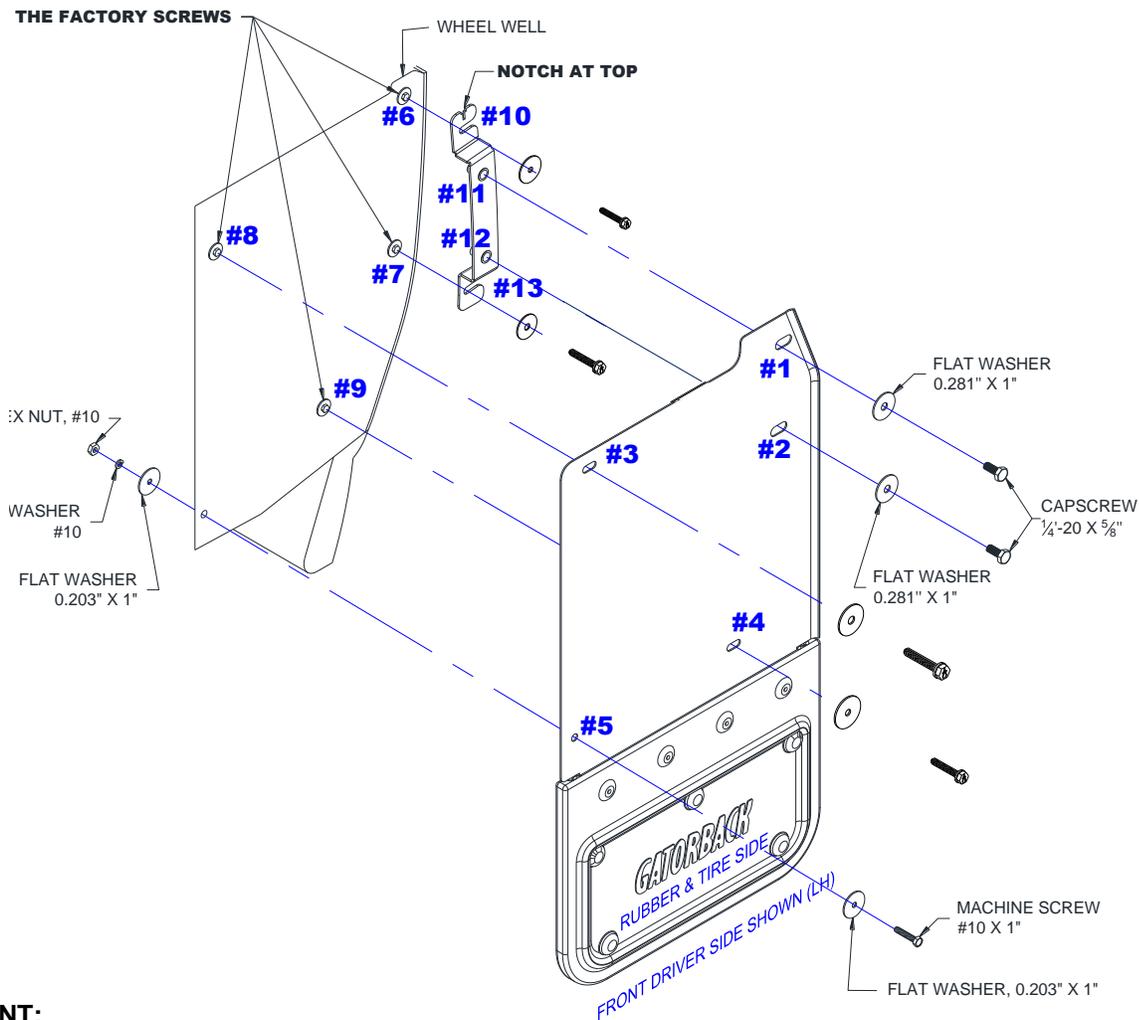

**IMPORTANT:**

Manufacturer is not responsible for negligent use of vehicle with Mud Flaps installed, or over tightening of screws and bolts causing damage to vehicle or mud flaps.