



2015, GM Canyon SLE/  
Colorado Z71 (Without Factory Flare)  
Mud Flap Set, 12", 5/8" Offset, Front  
Mounting Diagram & Instructions  
Kit# 759590

**IMPORTANT:**

**Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.**

**NO-DRILL SYSTEM**


**TOOLS REQUIRED-**



Electric or Chargeable  
1/2" or 3/8" Drill



1/4 " Drill Bit




7/16 & 5/16 & 3/8" Open End  
Wrench & Socket Wrench




T15 Screw Driver

**SCREWS / FASTENERS / WASHERS / FLAPS - PARTS BAG # 759596**

a) (1) Flap Assembly,  
Front, DS  
Part #759619



b) (1) Flap Assembly  
Front, PS  
Part #759620



c) (1) Mount Clip  
Front, DS  
Part #750582  
(Pre-installed)



d) (1) Mount Clip  
Front, PS  
Part #750584  
(Pre-installed)



e) (2) Screw, Machine  
#10 x 1", SS  
Part #012022



f) (4) Washer, Flat  
0.203" x 1", SS  
Part #018031



g) (2) Washer, Lock  
#10, Helicoil, SS  
Part #024001



h) (2) Hex Nut  
#10, SS  
Part #025003



i) (2) Cap Screw  
1/4 -20 x 1", SS  
Part #014007  
(Pre-installed)



j) (2) Washer, Flat  
0.281" x 1", SS  
Part #018028  
(Pre-installed)



k) (6) Screw w/Logo  
M4.2 x 1", SS  
Part #016041




l) (6) Washer, Flat  
0.188" x 0.781", SS  
Part #018018



**INSTALLATION** (For ease of installation it is suggested that the wheel be removed)

1. Before you install your Precision Mud Flap, see the diagram and parts list for all necessary parts. Cut the protective plastic and peel away from the stainless steel. Start on the driver's side.

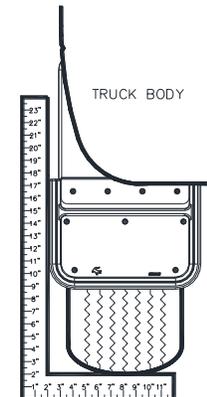


TRUCK BODY  
DRIVER SIDE (LEFT HAND) SHO  
REAR VIEW OF THE VEHICLE



2. Remove (3) factory screws #6, #7 & #8 from the wheel well as shown in the Diagram, and install (3) M4.2 screws #016041 and (3) flat washers #018018 on slots #2, #3 & #4 through the factory holes #6 to #8. Ensure the pre-installed mud flap clip (on hole #1) is behind the factory wheel well.
3. Square the flap with the tire while putting pressure against the wheel well, then tighten the (3) M4.2 screws.
4. Now secure the flap to the wheel by sliding the pre-installed mud flap mount clip (on hole #1) to the wheel well until the clip's teeth are gripped behind the wheel well then tighten the screw.
5. Drill ¼" hole (1), from hole #5 through the factory plastic liner and secure that hole with (1) #10 machine screw #012022, (2) 0.203" flat washers #018031, (1) #10 lock washer #024001 and one (1) #10 hex nut #025003.

**Caution:** Insure that you have access from behind the factory plastic liner to install and tighten the washers and nuts before drilling.

6. Repeat procedure for the passenger side.

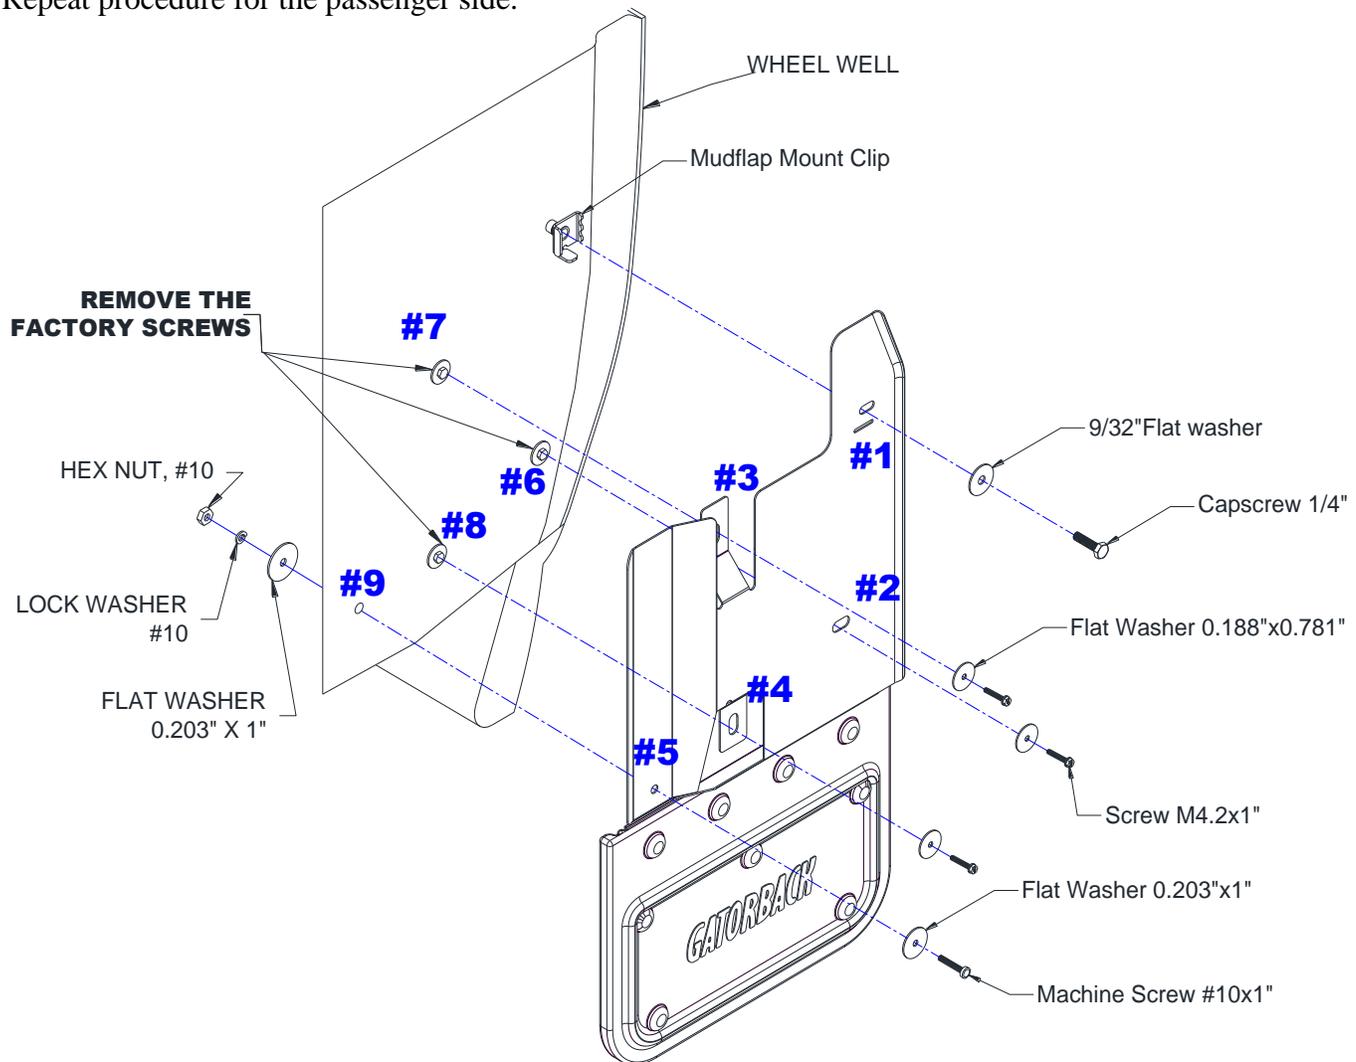

**IMPORTANT:**

Manufacturer is not responsible for negligent use of vehicle with Mud Flaps installed, or over tightening of screws and bolts causing damage to vehicle or mud flaps.