




**2011 – 2012, GM Heavy Duty, 2500/3500
Urea Tank Skid Plate
Mounting Diagram
Kit No: 701426 & 700152**

IMPORTANT:

**Manufacturer is not responsible for negligent use of vehicle with Skid Plate installed,
Including over-tightening of bolts causing damage to vehicle or Skid Plate.**

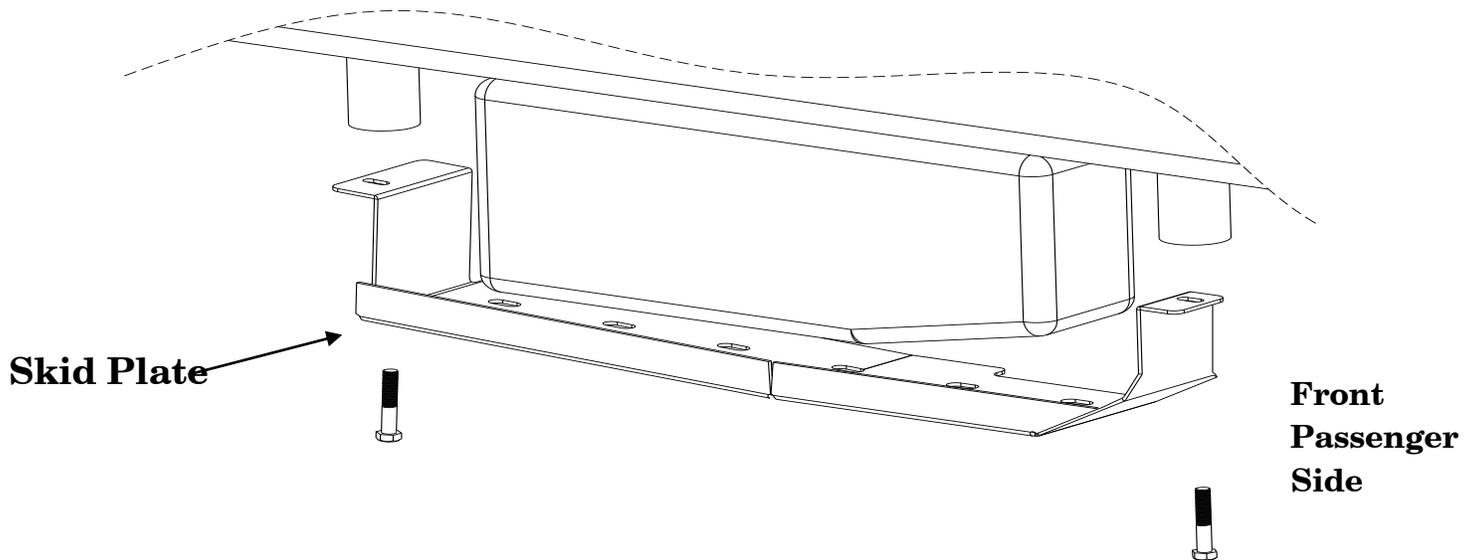

2011 Models, #701426, Without Factory Installed Tank Cover:

Installation: Remove factory cab mount bolts; place the skid plate over the Urea Tank, without factory cover. Reinstall factory bolts and tighten.

2011 & 2012 Models, #700152, with Factory Installed Tank Cover:

Installation: Remove factory cab mount bolts; place the skid plate over the Urea Tank with factory cover. Reinstall factory bolts and tighten.

IMPORTANT: *Inspect factory bolts, Ensure that they are tight! Inspect occasionally to ensure that they remain tight.*