



# 1223CUT, 5/8" OFFSET Stainless Steel Mud Flap Mounting Diagram & Instructions 2009-C Dodge Front, With Flare PART #756281

## IMPORTANT:

**Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, or over-tightening of screws and bolts causing damage to vehicle or mud flaps.**

## TOOLS REQUIRED




Electric or re-chargeable  
1/2" or 3/8" drill.



3/8" socket driver




1/4" drill bit




5/16 & 3/8" open end  
wrench or socket wrench

## SCREWS / FASTENERS / WASHERS / FLAPS - PARTS BAG #750409

a) (1) Flap Assembly, 09-C  
Front, DS



b) (1) Flap Assembly, 09-C  
Front, PS



c) (4) Screw, TEK, 410 SS  
1/4" x 1.25", HWH  
Part #010011



d) (8) Washer, Flat,  
0.203 x 1", 18ga. SS  
Part #018031



e) (4) Screw, Machine  
#10- 24x1" HEX HD.  
Part #012022



f) (4) Washer, Flat  
0.281" x 1", 18ga. SS  
Part # 018028



g) (4) Washer, Lock  
Part # 024001



h) (4) Nut, Hex, SS, #10  
Part # 025003



**Before you install your Mud Flap, see the above diagrams and parts list for all necessary parts.  
Start on the driver's side.**

## INSTALLATION

*For ease of installation, it is suggested that the wheel be removed.*

1. Before installation, peel protective plastic covering from the stainless steel panels. See the diagram and parts list for all necessary parts. Start on the driver side.
2. Remove the two factory screws on the wheel flare as shown in the diagram and reinstall The two factory screws on hole #2 and #4 through the factory holes #7 and #8. Loosely secure at this point.




3. Square the flap with the tire while putting pressure against to the wheel flare.

4. Secure the flap with two flat washers and two TEK screws on hole #1 and #3.  
Now tighten the two factory screws on holes #2 and #4.

**Be sure the flap is straight! Do Not over-tighten!**

5. Drill 1/4" holes (2) from holes #5 and #6 through the factory liner and secure those holes with two machine screws/four flat washers/two lock washers and two hex nuts.

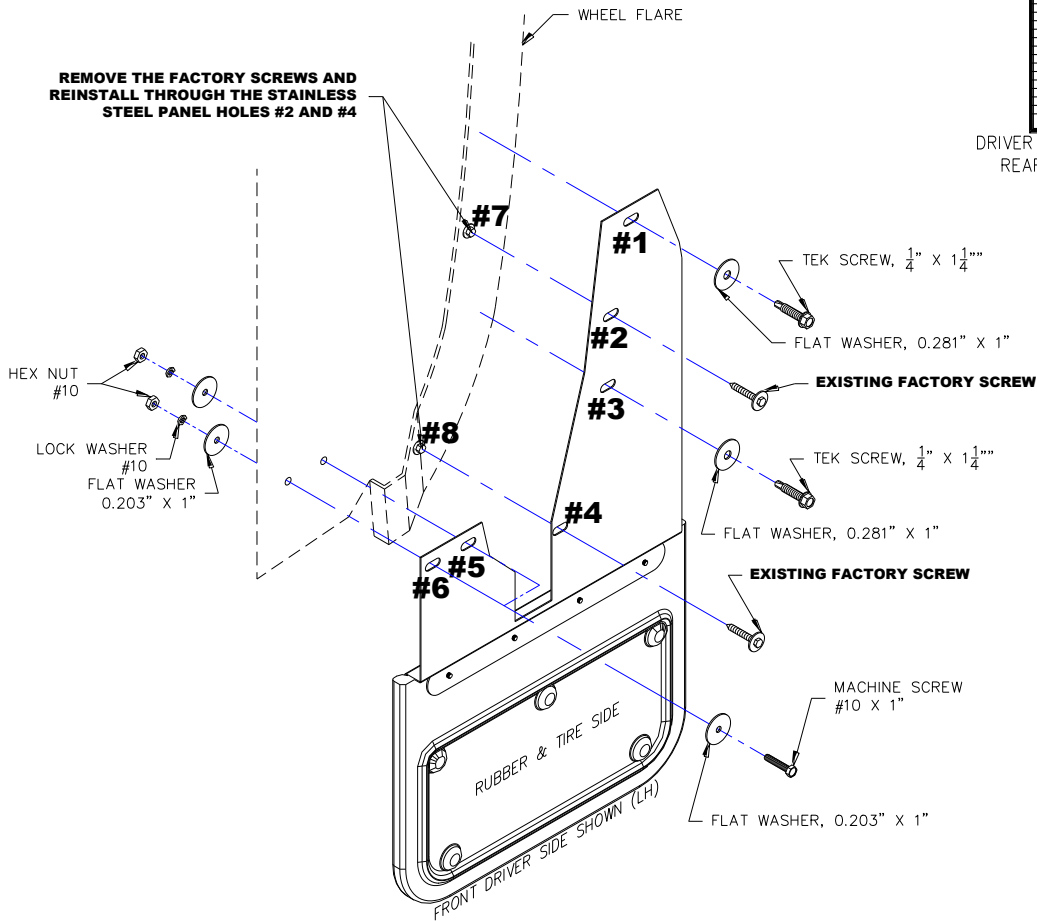

✓ Check all fasteners for tightness. Repeat procedure on the passenger side

## MAINTENANCE TIPS

### **Rubber Care**

Maintaining your rubber mud flaps is the same as looking after your tires. Use soap and water to remove road dirt and debris and then clean rubber with any good rubber weather/wear protector that you would use on your tires.

### **Stainless Steel Care**

Keeping your mud flaps looking great requires proper care to be taken with your stainless steel - the same care that you would take to look after the paint on your truck. High amounts of salt will deteriorate even the finest stainless steel if it is continuously abused. Wash the stainless steel on your mud flaps from time to time to remove any road grime or salt. To shine, use window cleaner to remove any spots or streaks.