




07-18, Toyota, 12"  
Toyota Tundra  
Mud Flap Set, 5/8" Offset, Front  
Mounting Diagram & Instructions  
Kit# 759802

**IMPORTANT:**

*Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.*

## NO-DRILL SYSTEM


### TOOLS REQUIRED-



Electric or Chargeable  
1/2" or 3/8" Drill




1/4 " Drill Bit




10mm Open End  
Wrench & Socket Wrench

### SCREWS / FASTENERS / WASHERS / FLAPS

a) (1) Flap Assembly,  
Front, DS  
Part #759804




b) (1) Flap Assembly  
Front, PS  
Part #759805



### INSTALLATION *(For ease of installation it is suggested that the wheel be removed)*


1. Before you install your Mud Flap, see the diagram and parts list for all necessary parts. Cut the protective plastic and peel away from the stainless steel. Start on the driver's side.
2. Remove four (4) factory screws #5 to #8 from the wheel well as shown in the diagram and reinstall the four (4) factory screws through slots #1 to #4. Loosely tightened at this point.
3. Square the flap with the tire, while putting pressure against the wheel well, then tighten the four (4) reinstalled factory screws.
4. Repeat procedure for the passenger side.

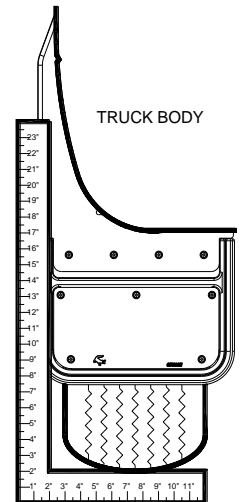

DRIVER SIDE (LEFT HAND) SHOWN  
REAR VIEW OF THE VEHICLE



# INSTALLATION DIAGRAM

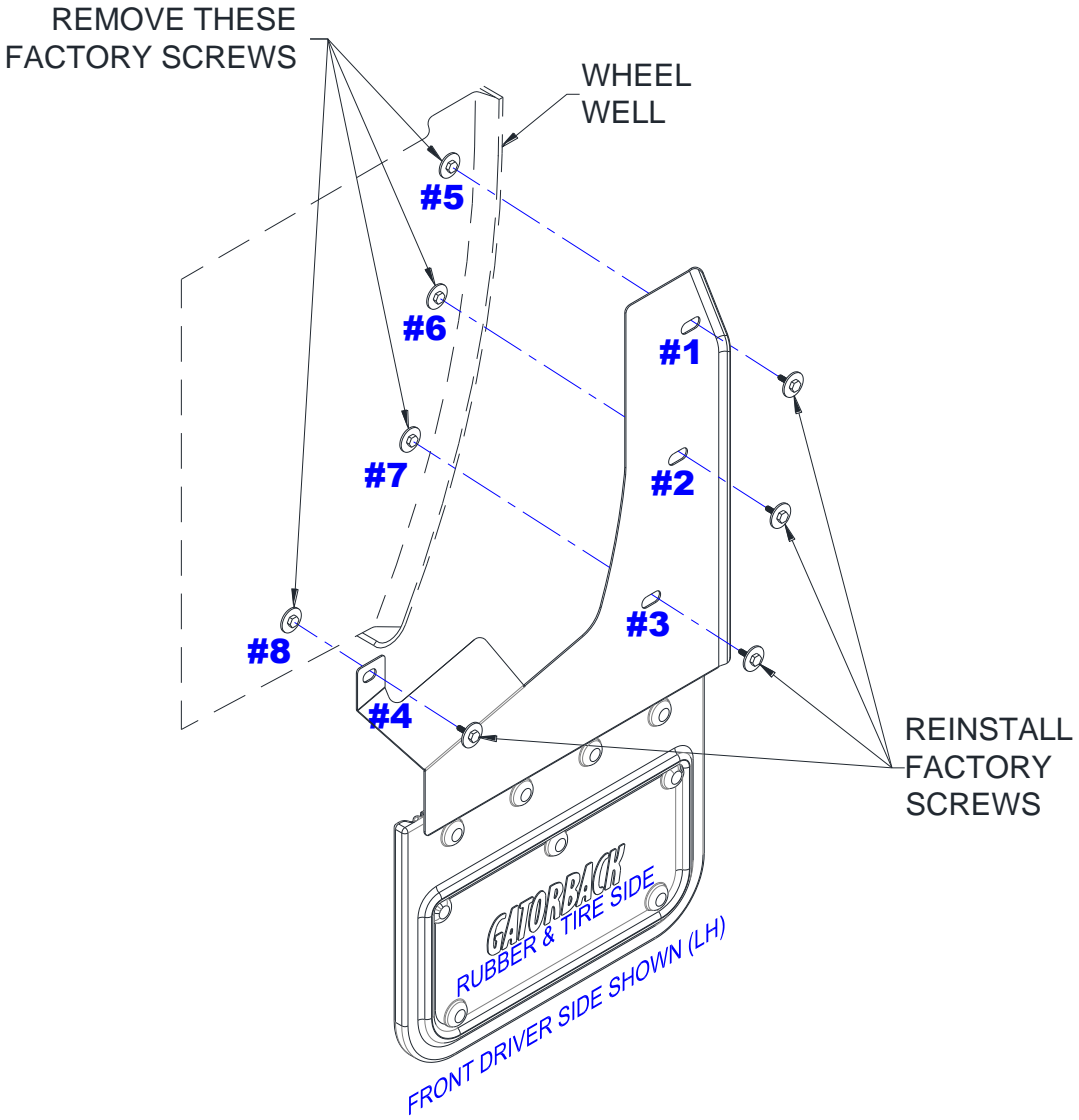

**IMPORTANT:**

Manufacturer is not responsible for negligent use of vehicle with Mud Flaps installed, or over tightening of screws and bolts causing damage to vehicle or mud flaps.