

**IMPORTANT:**

*The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.*

**TOOLS REQUIRED:**




Electric or Chargeable  
1/2" or 3/8" drill




5/16" Socket Driver

**KIT CONTAINS: PARTS BAG #750309**

a) (1) Flap Assembly,  
Rear, LH  
Part #755480

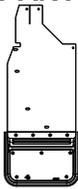

b) (1) Flap Assembly  
Rear, RH  
Part #755481

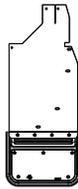

c) (14) Screw, TEK  
#10-16 x 1"  
Part #010009





d) (14) Flat Washer  
0.203" x 1.0"  
Part #018031



**INSTALLATION:** (For ease of installation, it is suggested that the wheel be removed)

1. Before you install your Mud Flap Set, see the Diagram and parts list for all necessary parts. Cut protective plastic and peel away from the stainless steel. Start on the Driver's Side.
2. Square the flap with the tire while holding the flap up against the wheel well, at the recommended height (approximately 8" from the bottom of the flap to the ground).
3. Ensure the 4 slotted holes on the stainless steel panel are centered on the wheel well and the slots in the stainless steel panel cannot be seen from the rear of the truck.
4. Fasten the flap with 7 TEK screws and washers on holes #1 to #7.
5. Repeat procedure for the passenger side.

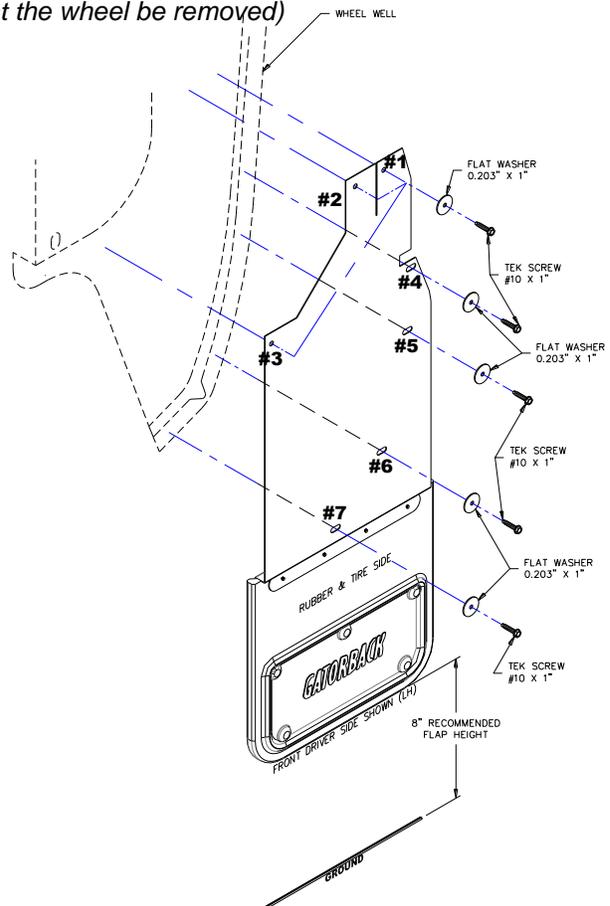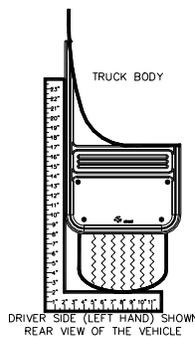

**IMPORTANT**

Manufacturer is not responsible for negligent use of vehicle with Mud Flaps installed, or over tightening of screws and bolts causing damage to vehicle or mud flaps.