



### IMPORTANT:

**Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.**


### TOOLS REQUIRED-

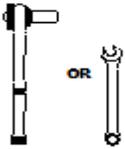


5/16" Open Wrench or  
Socket Wrench




7/16" Open Wrench or  
Socket Wrench

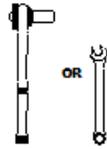

1/4" Open Wrench or  
Socket Wrench

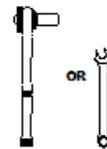

8mm Open Wrench or  
Socket Wrench

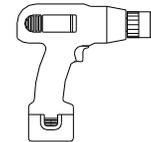


Electric or Rechargeable  
Drill




1/4" Drill  
Bit

### FLAPS

(1) Flap Assembly,  
Front, DS  
Part #771532

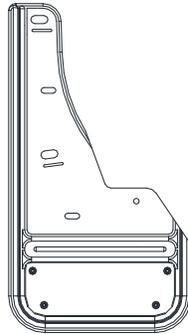


(1) Flap Assembly  
Front, PS  
Part #771533

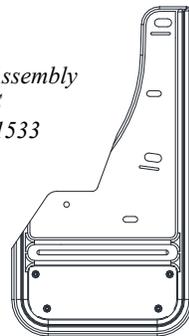

### PARTS BAG # 771536

**a)** (2) Machine Screw  
#10-24UNC x 1"  
Part #012050



**b)** (4) Capscrew, SS  
1/4"-20 x 5/8" Blk Ox  
Part #014071



**c)** (2) Screw, Sheet Metal  
#8-15 x 1.5" Blk Oxid.  
Part #016053




**d)** (2) Screw, Sheet Metal  
#8-15 x 1.25" Blk Oxid.  
Part #016059



**e)** (6) Spacer Washer, Nylon  
5/16" x 1" x 0.25" Thick  
Part #018036



**f)** (8) Washer, Flat  
0.203" x 1" 18g, SS, Blk Oxid  
Part #018070

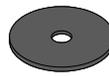

**g)** (4) Washer, Slotted  
0.281" x 1.5", SS Blk Oxid.  
Part #018084




**h)** (2) Washer, Lock  
18-8SS, #10  
Part #024001




**i)** (2) Hex Nut  
#10-24, Stainless  
Part #025003



**j)** (2) Mount Clip, DS  
w/Clinch Nut  
Part #769312

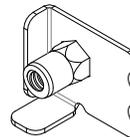


**k)** (2) Mount Clip, PS  
w/Clinch Nut  
Part #769313

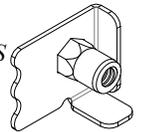

### INSTALLATION (For ease of installation it is suggested that the wheel be removed)

1. Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Start on the driver's side.
2. Remove 2 factory screws from wheel well liner holes #6 & #7.
3. Install mount clip (j) on mud flap holes #1 & 3 using a capscrew (b) and slotted washer (g)
4. Loosely secure mud flap hole #4 to factory hole #7 using a sheet metal screw (c) and flat washer (f), placing 2 spacer washers (e) between the flap and the wheel well liner.

5. Slide mount clip on mud flap hole #3 behind fender lip to secure
6. Loosely secure mud flap hole #2 to factory hole #6 using a sheet metal screw (d) and flat washer (f), placing a spacer washer (e) between the flap and the wheel well liner.
7. Slide mount clip on mud flap hole #1 behind fender lip to secure.
8. Square the flap using a square or other levelling tool.
9. Tighten all fasteners.
10. Using mud flap hole #5 as a guide, use ¼" drill bit to drill through liner. Secure mud flap hole #5 to drilled hole #8 using a machine screw (a) and flat washer (f) and secure from the back using a flat washer (f), lock washer (h), and hex nut (i)
11. Repeat procedure for passenger side.

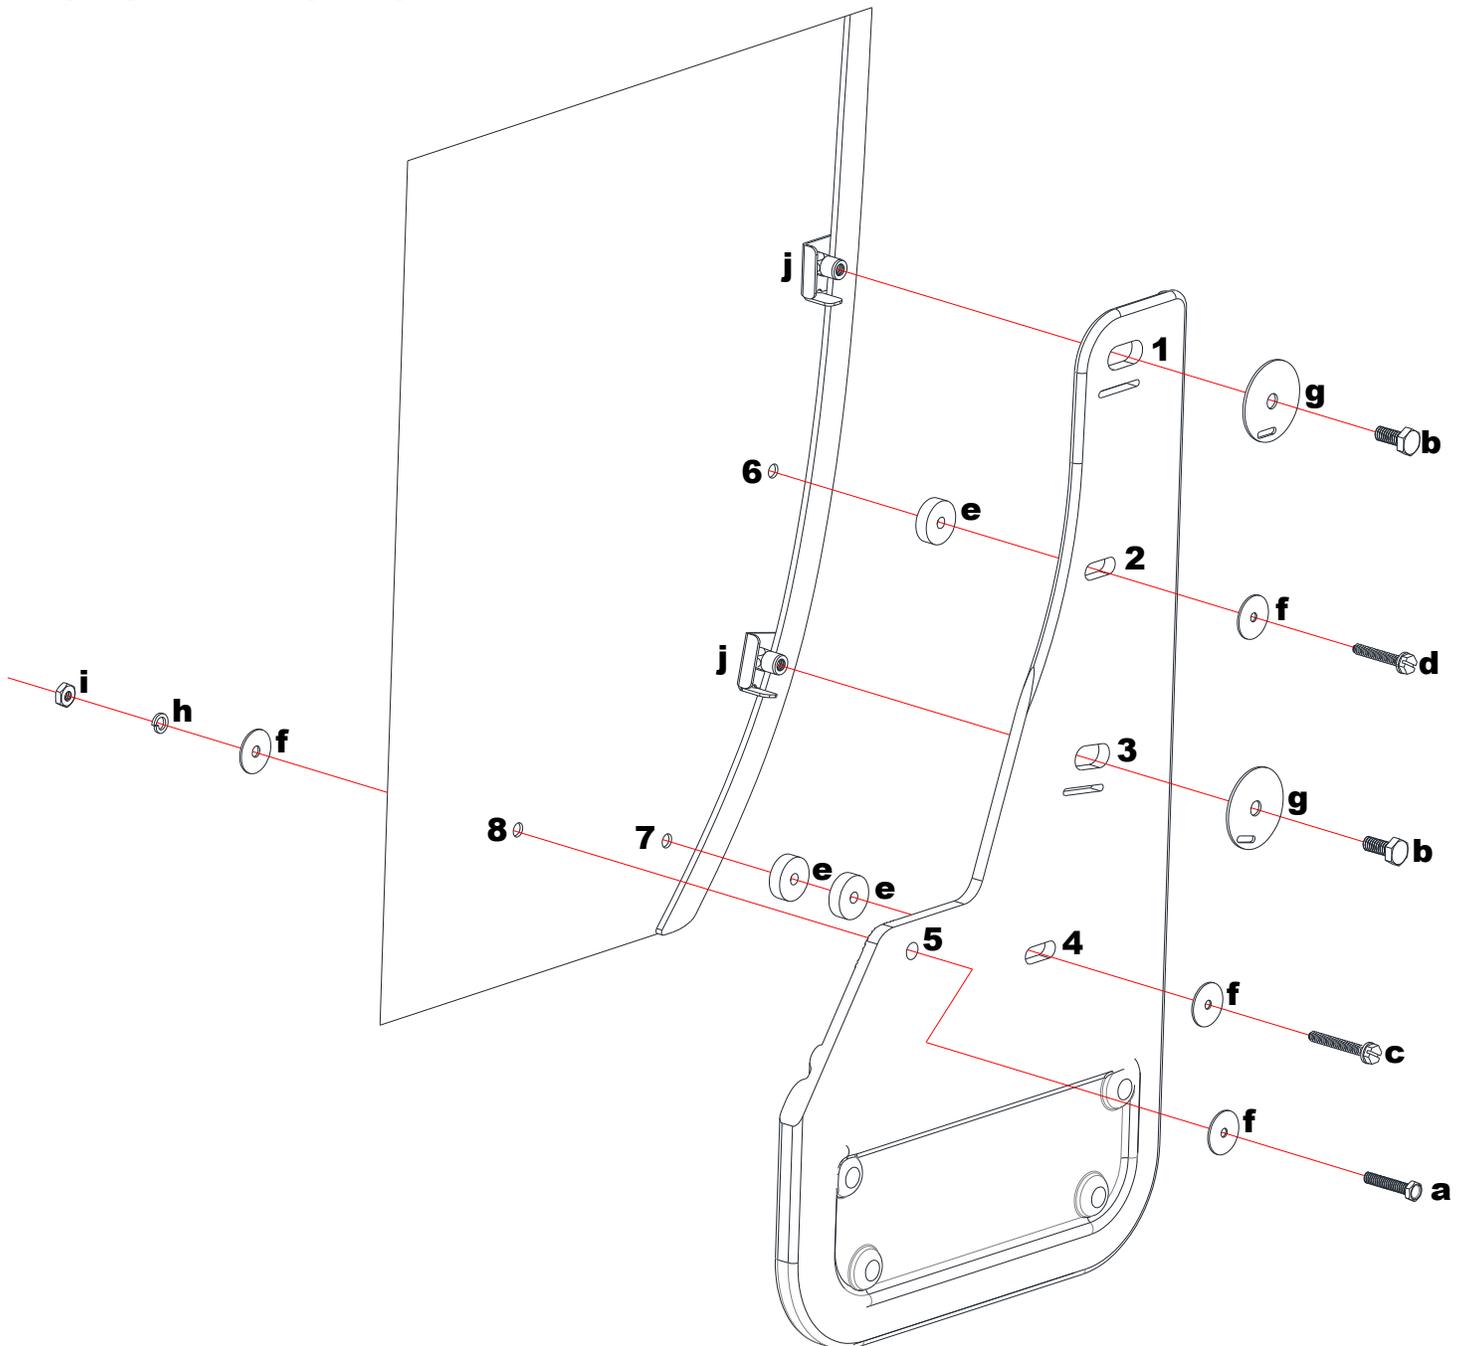


Please check out our YouTube channel to see an install video for this application.




**IMPORTANT:**

**Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.**


**TOOLS REQUIRED-**

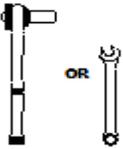

1/4" Open Wrench or  
Socket Wrench

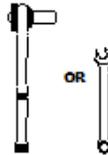


7/16" Open Wrench or  
Socket Wrench

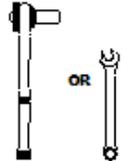


8mm Open Wrench or  
Socket Wrench

**FLAPS**

(1) Flap Assembly,  
Front, DS  
Part #771534

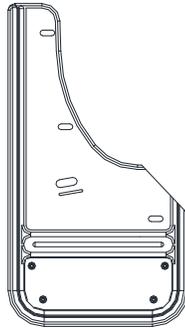

(1) Flap Assembly,  
Front, PS  
Part #771535

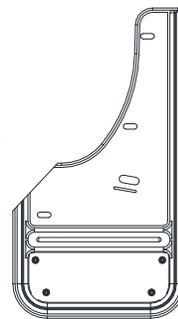

**PARTS BAG # 771537**

**a)** (2) Capscrew, SS  
1/4"-20 x 5/8" Blk Ox  
Part #014071




**b)** (2) Screw, Sheet Metal  
#8-15 x 1" Blk Oxid.  
Part #016057



**c)** (4) Screw, Sheet Metal  
#8-15 x 2" Blk Oxid.  
Part #016085



**d)** (8) Spacer Washer  
5/16" x 1" x 1/4"  
Part #018036

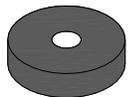

**e)** (6) Washer, Flat  
0.203" x 1" Blk Oxid.  
Part #018070




**f)** (2) Washer, Flat  
0.281" x 1.5", SS Blk Oxid  
Part #018084




**g)** (4) Washer, Flat  
0.203" x 0.885" Nylon  
Part #054080




**h)** (4) J-Clamp  
1.5" x 2.5"  
Part #767417

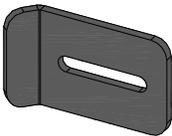

**i)** (1) Mount Clip, DS  
w/Clinch Nut.  
Part #769312

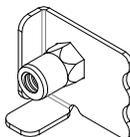


**j)** (1) Mount Clip, PS  
w/Clinch Nut  
Part #769313

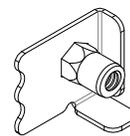

**INSTALLATION** (For ease of installation it is suggested that the wheel be removed)

1. Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Start on the driver's side.
2. Remove 3 factory screws from wheel well liner
3. Loosely install mount clip (i) on mud flap hole #3 using a capscrew (a) and slotted washer (f)
4. Loosely install mud flap hole #2 to factory hole #6 using a sheet metal screw (c), flat washer (e), nylon washer (g), and j-clamp (h), placing 2 spacer washers (d) between the rubber and wheel well liner

5. Loosely install mud flap hole #1 to factory hole #5 using a sheet metal screw (c), flat washer (e), nylon washer (g), and j-clamp (h), placing 2 spacer washers (d) between the rubber and wheel well liner
6. Slide mount clip on mud flap hole #3 behind fender lip to secure.
7. Loosely install mud flap hole #4 to factory hole #7 using a sheet metal screw (b) and flat washer (e).
8. Square the flap using a square or other levelling tool.
9. Tighten all fasteners.
10. Repeat procedure for passenger side.

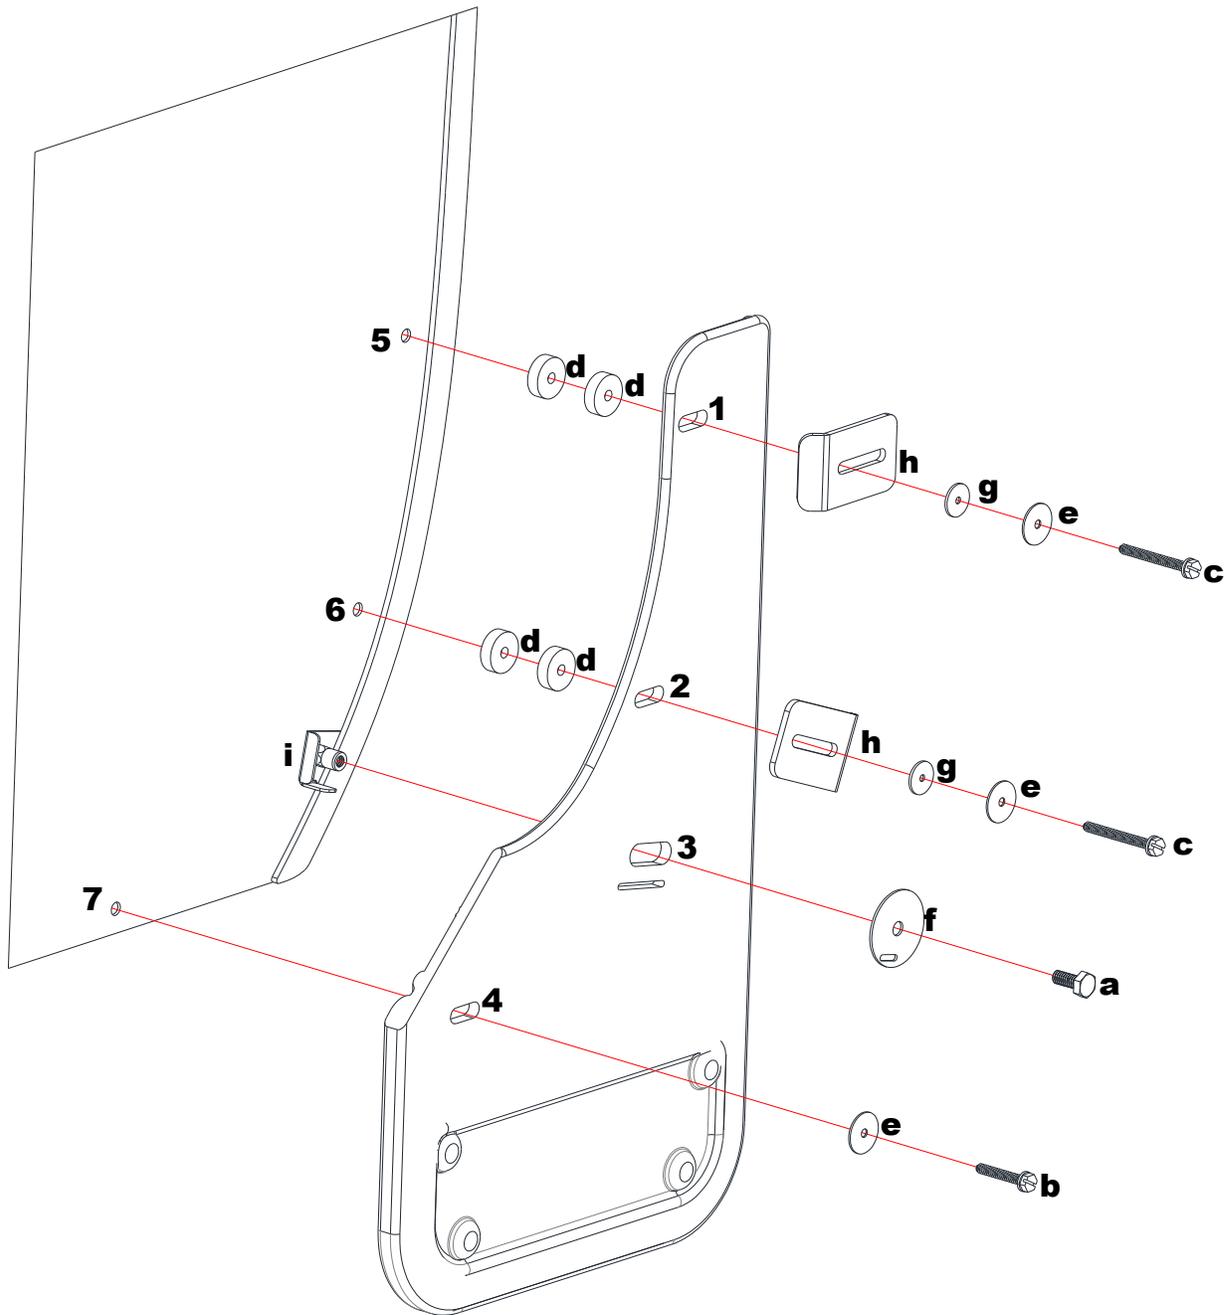

Please check out our YouTube channel to see an install video for this application.

