



2015-2016, GM Denali/Tahoe, Yukon, Yukon XL, Suburban 12" Mud Flap Set, Straight, Rear Mounting Diagram & Instructions PC Black, Kit# 759782

IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.


TOOLS REQUIRED-



Electric or Chargeable
1/2" or 3/8" Drill



1/4 " Drill Bit




7/16 & 5/16 & 3/8" Open End
Wrench & Socket Wrench




T15 Screw Driver

SCREWS / FASTENERS / WASHERS / FLAPS - PARTS BAG # 759192

- a) (1) Flap Assembly,
Rear, DS
Part #759612

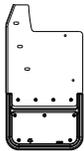

- b) (1) Flap Assembly
Rear, PS
Part #759613

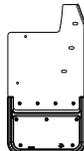

- c) (1) Bracket Assembly
Rear, DS
Part #759186



- d) (1) Bracket Assembly
Rear, PS
Part #759187



- e) (4) Screw, Machine
#10 x 1", SS
Part #012022



- f) (8) Washer, Flat
0.203" x 1", SS
Part #018031



- g) (4) Washer, Lock
#10, Helicoil, SS
Part #024001



- h) (4) Hex Nut
#10, SS
Part #025003



- i) (6) Cap Screw
1/4 -20 x 5/8", SS
Part #014006




- j) (6) Washer, Flat
0.281" x 1", SS
Part #018028



INSTALLATION (For ease of installation it is suggested that the wheel be removed)


- Before you install your Mud Flap, see the diagram and parts list for all necessary parts. Cut the protective plastic and peel away from the stainless steel. Start on the driver's side.
- Remove four (4) factory screws #6, #7, #8 & #9 from the wheel well as shown in the diagram and reinstall the four (4) factory screws on bracket slots (For XL: use slots #10, #13, #16 & #18; for the rest: use slots #11, #14, #16 & #18) through the factory holes #6 - #9. Align the bracket with the wheel well edge and secure the screws.

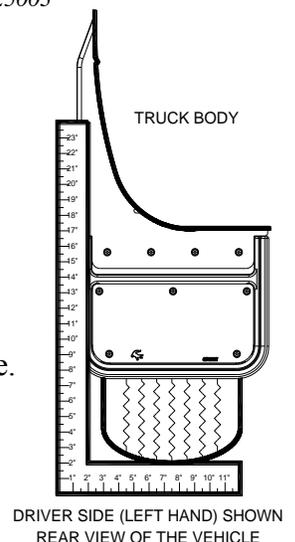

3. Install three (3) cap screw #014006 and three (3) flat washer #018028 on stainless steel panel holes #1, #2 & #3, through bracket holes #12, #15 & #17. Loosely secure at this point.
4. Square the flap with the tire, while putting pressure against the wheel well, then tighten the three (3) cap screws on holes #1 - #3.
5. Drill 1/4" holes (2), from hole #4 & #5 through the factory plastic liner and secure each hole with one (1) machine screw #012022, two (2) flat washers #018031, one (1) lock washer #024001 and one (1) hex nut #025003.

Caution: Insure that you have access from behind the factory plastic liner to install and tighten the washers and nuts before drilling.

7. Repeat procedure for the passenger side.

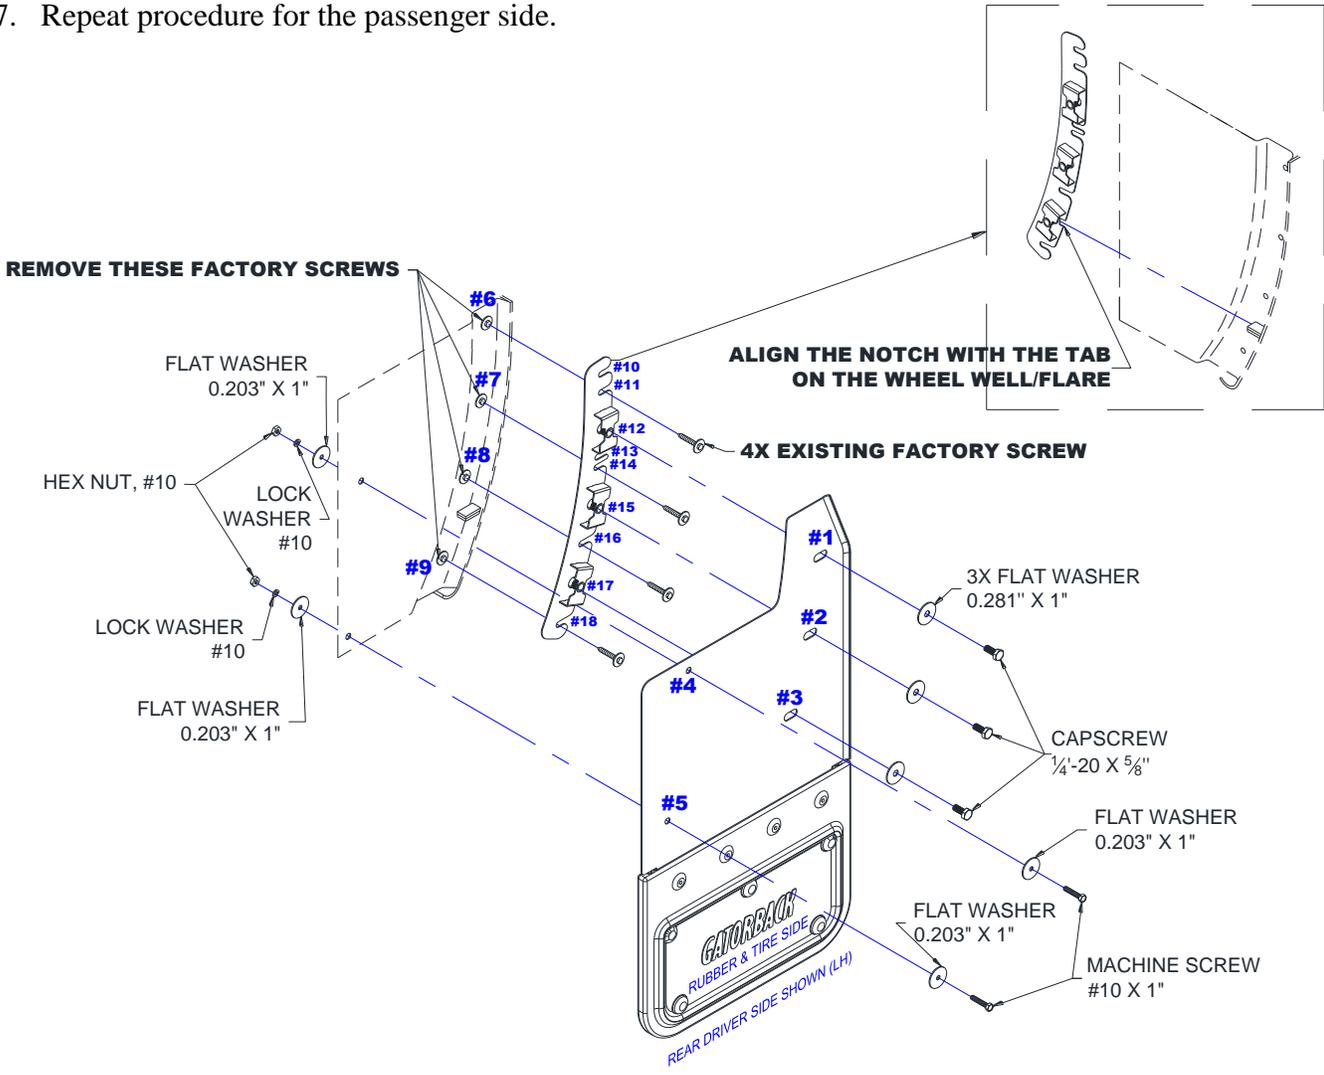

IMPORTANT:

Manufacturer is not responsible for negligent use of vehicle with Mud Flaps installed, or over tightening of screws and bolts causing damage to vehicle or mud flaps.