
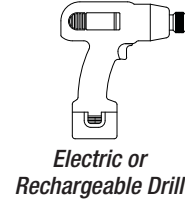


NOTE: Gatorgear Bar Fillers are manufactured to be used with OE Steps only.

TOOLS REQUIRED:

Note: Size will vary dependent on size of factory hardware on the vehicle

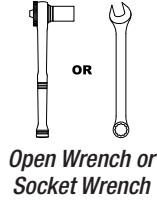


Plastic bracket guards must be removed for installation:



INSTALLATION:

1. Remove the Step Bar from the Driver's side by removing the factory bolts or nuts. Set Step Bar aside.
2. Ensure both Steps and Brackets are clean and free of debris.
3. Perform a dry fit to ensure proper alignment and ensure u-nuts in step are in place and secure.
4. Remove frisket from Bar Filler and install bulb seal along the top edge.
5. Place Bar Filler on brackets, aligning holes.
6. Reinstall the Step Bar over the Bar Filler using the factory bolts or nuts.
7. Repeat on passenger side.

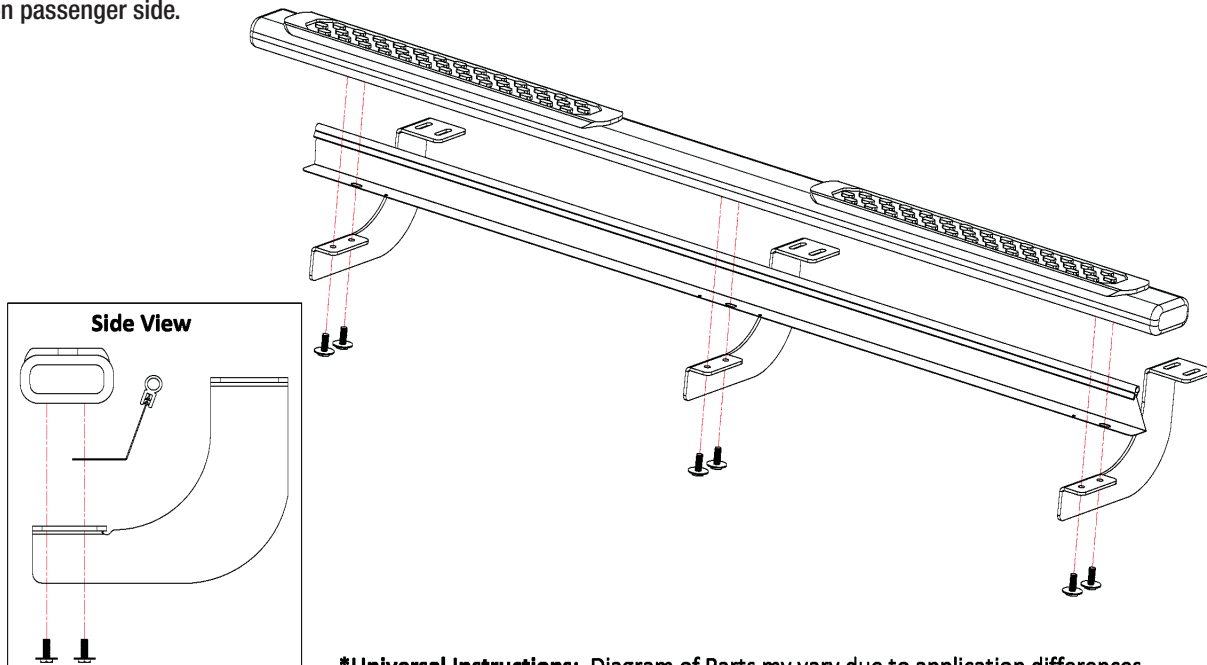

***Universal Instructions:** Diagram of Parts may vary due to application differences.